



# **FENTON CONVENTIONAL FLUE**

**CONVENTIONAL FLUE OUTSET CONVECTION HEATER  
SUITABLE FOR NATURAL GAS & PROPANE**

## **USE, INSTALLATION & SERVICING INSTRUCTIONS**

**Important**

**A Carbon Monoxide Alarm Complying With BS EN 50201 Must Be Provided  
In The Room Where The Gas Fire Is Installed.**

**It Must Be Fitted And Maintained In Line With The Manufacturer's Instructions.**

**All Propane (LPG) Installations Should Be Fitted with a Over Pressure Shut Off Valve (OPSO).**

**The glass panel and outer parts of this fire will become hot during use, cloths or combustible items  
must not be placed close to or on the fire. We recommend that a Fireguard conforming to BS8423  
should be used for protection of Young Children the Elderly, Infirm and Pets.**

**ALL INSTRUCTIONS MUST BE LEFT WITH THE USER FOR  
SAFE KEEPING**

**MANUFACTURED by:**

**Nu-Flame Limited**

**Unit 4, Kimpton Trade & Business Centre**

**Minden Road, Sutton, Surrey SM3 9PF**

**Tel: 020 8254 6802**

**Fax: 020 8641 9992**

**Email: [sales@nu-flame.co.uk](mailto:sales@nu-flame.co.uk)**

**Country of Destination – GB & IE**

# CONTENTS

Section No	Subject	Page
	<b>User Section</b>	
-	Contents Page	2
-	Box Contents	2
-	Fitting Kit Contents	3
1	Important Notes	4
2	Lighting & Controlling the Fire	5
3	Cleaning the Fire	8
4	Servicing	8
	<b>Installation Section</b>	
-	Record Data	8
-	Site Surveying	9
5	Installation Requirements	10
6	Appliance Data	10
7a	Appliance Dimensions	10
8	Flue Requirements	11
9	Ventilation	11
10	Gas Supply	11

***Sections 11 - 13 are for the various installation applications -  
Ensure you refer to the section relevant to your requirement***

11	Class 1 & Lined Flue Fire Surround Application (Fireplace Construction)	12
12	Pre-Cast Fireplace Application & Requirements (Fire Surround Requirements)	14
13	BS715 Shallow Flue Box with 5" Twin Wall Flue Application (False Chimney Breast Construction with Fire Surround)	16
14	Fixing the Fire	18
15	Arrangement of the Fuel Effect	20
16	Testing, Commissioning & Use	26
17	Briefing the Customer	27
18	Servicing	27
19	Fault Finding Guide, Symptoms & Possible Cause	28
20a,b,c& d	Energy Class & Product Fiche	30
21a & b	UK & EU Declaration of Conformity	34
22	Diagram of Thermatronic Radio Frequency Control System	36
-	Guarantee	37

## **BOX CONTENTS (The Fire comes in a number of boxes)**

Box 1 - Large box - contains the Fire, the Matrix Tray, chosen Control System plus Fitting Kit (see over-leaf for contents).

Box 2 - The Fuel Bed, (Coal or Wood and Matrix's).

Box 3- The Fenton Case with Fixing Brackets.

The Fenton Fixing Brackets will have to be fitted to the main Fire see the next page.

**FENTON CF FITTING KIT CONTENTS:**

Cable Fixing Kit (2 # cables and fittings, 4 # eye screws, 4 # plastic plugs)

1 # Flue Restrictor

2 # No6 x 10mm pointed self tapping screws for above.

2 # No6 x 5mm blunt self tapping screws for fixing the Case.

1 # 10mm Back Nut & olive to connect 8mm copper pipe gas supply to the burner (via the isolation elbow)

1 # 2.1 metre length of 6mm x 4mm self adhesive silicone sealing foam strip.

1 # No2 Posidriv screwdriver (for glass removal)

1 # Set of Instructions / Warranty

*Note – No6 screws are a smaller diameter than No8 screws.*

# THE FENTON CF USER INSTRUCTIONS

## 1. - IMPORTANT NOTES

- a. This appliance must be installed by a properly qualified (in accordance with National & Local Regulations) Installation Engineer.
- b. The connection of this appliance and ventilation requirements (if any) are to be according to National & Local Codes.
- c. This appliance does not normally require any purpose provided additional ventilation, however if it has been found necessary to add a vent periodically check that it is free from obstruction.
- d. Consult all Instructions before Installation and Use.
- e. Do not throw rubbish on, or attempt to burn any materials on this appliance. Any Debris or Foreign Matter must be removed from the fire.
- f. Under No Circumstances must this fire be used if the Glass Panel is broken, damaged, cracked or has been removed.
- g. The glass panel and outer parts of this fire will become hot during use, cloths or combustible items must not be placed close to or on the fire. We recommend that a Fireguard conforming to BS8423 should be used for protection of Young Children the Elderly, Infirm and Pets.
- h. The appliance should be Serviced Annually in accordance with the Gas Safety & Uses Regulations.
- i. Where the flue has been used for Solid Fuel it must be swept before Installation.
- j. If at any time you smell gas or fumes turn the fire off and contact your Installer.
- k. These Instructions must be left with the User for future reference.
- l. During its first period of use any protective coatings and oils will burn out of the appliance and it is wise to ventilate the room for the first hour of use.
- m. This appliance is fitted with an oxygen depletion sensing system, which automatically shuts off the gas supply to the fire if the oxygen level in the room is depleted, due to lack of primary air, or obstructed flue (blocked chimney) that would lead to incomplete combustion of the gas. It must not be tampered with and only replaced with a genuine Nu-Flame ODS.
- n. In the event that the fire shuts down for any reason, attempt to restart it. If there is a continuing problem, call in a properly qualified specialist engineer.
- o. There are no user replaceable parts in the appliance apart from the batteries, for the Thematronic Electronic Control System.
- p. The chimney should be regularly checked to ensure that all the products of combustion are entering the flue & that there is no build up of soot. If there is, the appliance must be serviced.
- q. Coal & Wood Effect Parts are manufactured from RCF (Refractory Ceramic Fibre are supplied with this appliance, see Health & Safety guidance).  
Do not use real coals or wood as this is dangerous. If the simulated fuel bed components need renewing please obtain suitable replacements from a Nu-Flame Stockist.
- r. The fire must be installed in accordance with the rules in force and these Instructions it must be installed in front of a fireplace or builders opening on a non combustible hearth as detailed in these Instructions.
- s. No combustible materials e.g. curtains must be closer than 500mm to the fire.
- t. For Fire Surround Applications a 150mm (6") combustible shelf can be fitted above the fire provided it is 750mm above the Hearth.
- u. The Fire can be installed into a suitably designed fire surround with a 150°C Rating.
- v. Explain to the customer that over time some wall staining will occur above the fire and this is due primarily to particles of dust present in the hot convection air circulating up and over the fire/surround and sticking to the wall.

**! IMPORTANT NOTE ! THE GLASS PANEL ON THIS FIRE WILL BECOME VERY HOT DURING OPERATION - SEE ITEM 'g.' ABOVE.**

***It is quite normal for the fire to make popping and burbling sounds when in use, as would a solid fuel fire.***

### **Health & Safety Advice Refractory Ceramic Fibre (RCF)**

#### **Advice when working with Fuel Bed Components including Installing, Servicing and Disposal.**

The Fuel Effect parts and possible Linings of this fire are made from Refractory Ceramic Fibre (R.C.F.) a Class 2 Carcinogen which is a material designed for this Application. Excessive exposure to these types of materials may cause temporary irritation to eyes, skin and respiratory tract. Therefore take care when handling these articles to ensure dust is kept to a minimum.

It is not necessary to wear protective clothing when handling these articles but we do recommend you follow the normal hygiene rules of not smoking, eating or drinking in the work area, and always wash your hands before eating or drinking.

To minimise the release of RCF fibres during installation and servicing a HEPA filtered vacuum is recommended to remove any dust accumulated in and around the fire both before and after working on it.

When Servicing and if replacing these parts we do not recommend they are broken up but are sealed within a heavy duty polythene Bag and labelled as "RCF waste". This is not classified as "hazardous waste" and may be disposed of at a local licensed landfill site.

## 2. - LIGHTING & CONTROLLING THE FIRE

### General

The fire is available with 3 Control Options: Manual Control (Fire is lit and adjusted manually), or Thermatronic Radio Frequency Electronic Control System (Fire is lit & operated with a Handset) or the Thermostatic Thermatronic Radio Frequency Electronic Control System (Fire is lit & operated with an Handset which also can control the room temperature plus other features).

### 2.1- LIGHTING & CONTROLLING THE FIRE - MANUAL CONTROL

Open the Door at the bottom of the fire by pulling at the right side.

**a. Switching On/Ignition.** Depress the control knob & turn counter clockwise. Gas will flow to the Pilot Burner (Pilot Burner is visible looking down through the glass at the left side), the Piezo Igniter will give off first one, then, as you turn, a second high voltage spark & the Pilot Burner will Light. (More than one attempt may have to be made on first lighting.)

Keep the Control Knob depressed for approximately 10 seconds to heat up the Thermocouple. Turn the Control Knob fully counter clockwise to release gas to the Main Burner.

**b. Control of Gas Flow.** Turning the Control Knob clockwise reduces the gas flow from Maximum to the Pre-Set Minimum Setting. Turning between Maximum & Minimum does not actuate the Piezo Igniter. The Control Valve can only be set on the Pilot by depressing the control knob & turning it to the pre-selected pilot position.

**c. Switching Off.** Press the Control Knob in at the Pilot Position & turn Clockwise to Off.



### 2.2- LIGHTING & CONTROLLING THE FIRE – Thermatronic & Thermatronic (Thermostatic) Remote Control Systems

The Remote Control Systems are both battery operated gas fire remote control systems that uses a microprocessor to provide the working sequences needed by the fire, and when used with an oxy-pilot have all the safety features required by law and CE approval.

Commands are accepted by the microprocessor when buttons are pressed. An audible beep means that the command has been received, and the push button should immediately be released to allow the control to operate .

#### Using the Thermatronic Remote Control System

Control can only be achieved if the Handset is pointed at the Fire. The red light will flash each time you press a button on the Handset.

**a. Ignition.** Simultaneously press and hold the red button and the right upper button (linked by line) until a short acoustic signal confirms that the sequence has begun, then release the buttons. Continuous audible signals confirm that ignition is in progress.

When pilot ignition is confirmed the motor will open the valve to maximum flame height – this takes about 30 seconds.

*It is normal for condensation to appear on the glass on start-up. This will clear after a minute or so.*

**b. Flame Height Adjustment.** Press the small flame button until the flame height is at the desired position. If you try to go beyond the preset low flame minimum height the fire will turn off leaving the pilot burner alight (this is the standby position). You will learn from experience the minimum preset flame height.

**c. Relighting the Fire.** To relight the fire from the standby position, or to increase the flame height from low flame, simultaneously press and hold the large flame button until the desired flame height is achieved.

Please note that you can have the flame height anywhere between maximum and preset low.

For fine adjustment simply tap the small or large flame buttons.

**d. Switching Off.** Press the red/off button on the handset.



### 2.3 - LIGHTING & CONTROLLING THE THERMATRONIC (Thermostatic) REMOTE CONTROL SYSTEM


Control can only be achieved if the Handset is pointed at the Fire.

You will see that the Handset as a screen with symbols and reference should be made to the following screen settings shown for each stage of operation. With the fire in the off position the screen will look as shown below.

This is the Manual Setting display and will be used to first light the fire.

The screen with symbols are shown below.

Note: Radio Frequency Symbol Shows Only When Pressing Handset

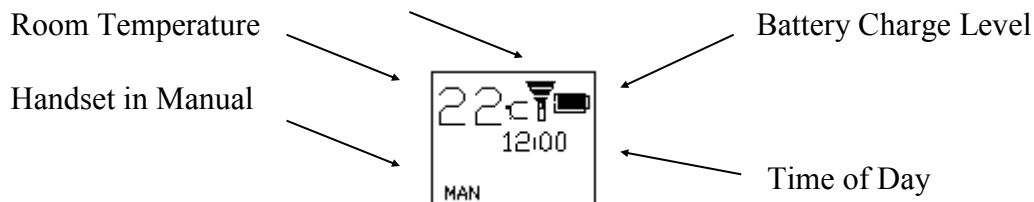

## 2.4 Using the Thermatronic (Thermostatic) Remote Control System

Control can only be achieved if the Handset is pointed at the Fire.

**a. Ignition.** Simultaneously press the Off and Large Flame Buttons (linked by the line/star symbols) until a short acoustic signal confirms that the sequence has begun, then release the buttons.

Continuous audible signals confirm that ignition is in progress.

When pilot ignition is confirmed the motor will open the valve to maximum flame height – this takes about 30 seconds. The main burner will then light at the high flame setting.

**b. Flame Height Adjustment.** Press the small flame button until the flame height is at the desired position. For fine adjustment tap the Large Flame or Small Flame buttons.

If you try to go beyond the low flame setting the fire will turn off the main burner leaving the pilot burner alight (This is the standby position).

You will learn from experience how to achieve the minimum low flame setting.

**c. Relighting the Fire.** To relight the fire from the standby position, or to increase the flame setting from low flame, simply press the large flame button.

Please note that you can have the flame height anywhere between maximum and low.

For fine adjustment simply tap the large and small flame buttons.



**Note:** You can also automatically set the fire at either Tall or Low Flame setting by pressing the desired flame Button twice.

**d. Switching Off.** Press the off button

You can now proceed to the other features of the Handset such as Setting the Time, Temperature and Time Programmes.


**e. Setting Temperature - Time in Centigrade-24Hour Clock or Fahrenheit-12Hour Clock.**

- Simultaneously Press the Off and the Down Arrow buttons until the display changes from Fahrenheit -12Hour Clock to Celsius -24Hour Clock and visa versa.

**f. Setting the Time.**


The time of day will flash after either:

- Installing the batteries or
- By Pressing the Large Flame and Small Flame buttons at the same time.
- Press the Large Flame button to set the Hour.
- Press the Small Flame button to set the Minute.
- Press Off or simply wait to return to the manual screen.

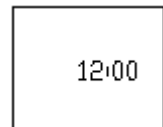




**IMPORTANT :** For the following modes of controlling the fire automatically for Temperature or Timer Programs the Fire Must be left in the Standby Setting (Pilot Lit) and left on the chosen Setting, with the Screen showing either Temp or Timer.

**g. Setting the Day Time Temperature.**

- Briefly Press the Set Button to scroll to TEMP (Sun  Symbol - Daytime) Mode.
- Hold the Set Button until the TEMP flashes then release.
- Now press the Large Flame button to increase the Daytime - Sun temperature. or
- Press the Small Flame button to decrease the Sun-Daytime temperature.
- You can now press the Set Button to scroll to setting the Night Time Temperature or press off to return to Manual Screen.



**h. Setting the Night Time Temperature.**

- Briefly Press the Set Button to scroll to TEMP (Moon Symbol  Night Daytime) Mode.
- Hold the Set Button until the TEMP flashes then release.
- Now press the Large Flame button to increase the Night  Time - Moon temperature. or
- Press the Small Flame button to decrease the Night Time  Moon temperature.
- You can now either leave the handset on the TEMP setting and with the fire lit the room temperature will be controlled or return to the Manual Screen. Your Settings will remained stored.



**Note:** With the Temperature Settings now set the Handset will have to be left in the TEMP mode to control the fires temperature.

**Note:** In the Manual Mode neither of the Automatic TEMP or TIMER settings will be active.

**Note:** If you Set the Room Temperature below the present room temperature the fire will go straight to the Standby Setting until the temperature drops below the Set Temperature at which point the main burner will relight.

**Note:** The Room Temperature is sensed by the Handset so place it in the ideal position to control the room temperature.

**Note:** An Holder is available for the Handset as an optional extra and this should be positioned to control the set room temperature.

**Note:** If at any time you wish to correct or check the settings you have made you can simply keep pressing the Set Button until the screen displays the Manual Setting and repeat the operations as detailed above.

### i. Setting the Timer Programs P1 and P2 for Daytime & Night Time Settings.

- The Timer Programs are identified by the symbols P1 and P2 on the screen and each can be set for both daytime (sun symbol) and night time (moon symbol) settings.

**Note :** Both Programs have to be set, you cannot just set one program, however you can set both at the same settings.

#### Setting the P1 (Program 1), On Time

- Briefly Press the Set Button to scroll to TIMER Mode.
- Hold the Set Button until P1 Sun Symbol (Daytime) is displayed and the time flashes.
- Press the Large Flame button to set the Hour.
- Press the Small Flame button to set the Minute.



#### Setting the P1 (Program 2), Off Time

- Briefly press the Set Button to scroll to the P1 Moon Symbol (Night time) is displayed and the time flashes.
- Press the Large Flame button to set the Hour.
- Press the Small Flame button to set the Minute.



#### Setting the P2 (Program2), On Time

- The Screen will automatically proceed to setting the P2 Settings
- Briefly Press the Set Button to scroll to the P2 Sun Symbol (Daytime) is displayed and the time flashes.
- Press the Large Flame button to set the Hour.
- Press the Small Flame button to set the Minute.



#### Setting the P2 (Program2), Off Time

- Briefly press the Set Button to scroll to the P2 Moon Symbol (Night time) is displayed and the time flashes.
- Press the Large Flame button to set the Hour.
- Press the Small Flame button to set the Minute.



- Both Programs** Press Off or simply wait to return to the Manual Screen.

**Note :** With the Programs now set the Handset will have to be left in the TIMER mode to enable the programs to control the fire.

## 2.5 - GENERAL - ALL THERMATRONIC CONTROLS

- Battery replacement is recommended at the beginning of each heating season, or when an acoustic error message sounds at ignition.
- Error Message – Long signals (0.8 second tone – 0.2 second break) during ignition – probable cause batteries in electronic receiver box are nearly discharged.
- Error Message – 5 second continuous tone – probable cause – cable disconnected or on/off switch on valve is in off position.
- Batteries - Electronic Receiver Box - 4 x AA good quality alkaline - Handset - 1 x PP3 good quality alkaline.
- To change the Handset battery slide open the plastic panel on the back of the Handset.
- To change the Receiver Batteries remove the Ash Pan Cover and locate the electronic receiver box, underneath the fire on the left hand side. Slide open the plastic cover to gain access to the battery compartment. You can detach the Receiver by pulling it off its Velcro Pad to make access easier but remember to put it back in the same position under the metal shield.

**Note: Only Change The Batteries When The Fire Is Cold**

## 2.6 - RESETTING THE MERTIK MAXITROL LOGIC CIRCUITS - IF THE HANDSET DOES NOT WORK ONLY APPLIES TO THE THERMATRONIC HAND HELD RADIO FREQUENCY CONTROLS

**Basic Reset** - It sometimes happens that (such as when the handset buttons are pressed out of sequence) the fire stops working because the logic circuits get confused and need to be reset.

To do this, simply remove the 4 x AA batteries from the Receiver Box (see section 2.5f above), wait for 1 minute and then refit the batteries. Wait for another minute and then point the handset at the fire and press the red/off button. Wait for another minute and then start the fire as normal. If the fire does not start repeat the resetting procedure. If the fire still does not work a Full Reset can be tried (see next page).

**Full Reset** - If you obtain a new handset the control system will need to learn the handset's unique code via a Full Reset.

Also, if the fire is not working and the Basic Reset (described on page 7) has not worked a Full Reset can be carried out:

Remove the Ash Pan Cover and locate the electronic Receiver Box.

Locate the Reset Hole on the side of the Receiver and using a pen press and hold in the Reset button until you hear two beeps.

The first beep is short and the second beep is long. After the second beep release the Reset Button.

Now on the Handset, within the next 20 seconds press and hold the Small Flame Button until you hear two additional short beeps confirming the code is set in the Receiver.

If you hear one long beep the Code as not been set so repeat the procedure.

If after carrying out the above procedure the situation is not corrected it will be necessary to contact your Installer.

**Note: For the Installation/Service Engineer** - Resetting of the Handset & Control System is also covered in Section 21.1 page 32.

**3. - CLEANING THE FIRE**

**Note: Marks on the Glass Panel are Not Covered by the Manufactures Warranty.**

- a. **Important** : Always Allow the fire to cool before carrying out any cleaning.
- b. **Please Note:** The glass panel surface within the room will be marked by air borne particles as air circulates through the fire from the room, this is quite normal and cannot be prevented.  
So the glass surface within the room can be cleaned with proprietary glass cleaners and any residue removed and dried afterwards.  
**No Abrasive Cleaners Must be used.**
- c. Within the fire it is quite normal for soot and stains to build-up on the inside of the glass panel, this is why we advise that the glass panel must be fully cleaned during the Annual Service, however you can remove the glass panel for cleaning as follows:
  - i. Remove the Ash Pan. Remove the Outer Frame Assembly, it is held in place with magnets quite tightly, Pull to Remove.
  - ii. Using the Screw Driver provided Slacken the 2 Screws at the Bottom Left and Right Corners Securing the Glass Panel, Swivel the Brackets Off the Glass Panel then Ease it outward slightly at the base then Pull down and remove.
  - iii. To clean the glass panel use proprietary glass cleaners, however for stubborn stains use 'T Cut Original' and following treatment remove all residue and polish with a dry cloth. Take care not to damage the door seal and reposition around the glass if necessary.  
Note: The glass is etched with the Nu-Flame logo ensure it is at the bottom right hand corner when refitting the glass panel.
- d. The outer surfaces of the fire can be cleaned with a damp cloth, do **not** use any abrasive cleaners.  
For Stainless Steel finishes we recommend a small amount of Baby Oil.

**! IMPORTANT !** The Fire **Must Never** be used without the Glass Panel in place or if the Glass Panel is in any way damaged.

**4. - SERVICING**

- a. The fire should be Serviced Annually in accordance with the Gas Safety & Uses Regulations.
- b. This fire contains no User Serviceable Parts apart from the batteries which are only used with the Thermatronic Control System option.
- c. Servicing must be carried out by a Registered Installer.
- d. For Servicing or Spare Parts contact your Installer quoting the Fire Name, Model and Serial Number, which can be found on the Data Badge. To find the Data Badge/Plate; with the fire cool remove the Ash Pan, the Data Badge can be found at the base next to the Control Knob.
- e. In the event that the fire shuts down due to any reason, attempt to restart it. If there is a continuing problem, call in a properly qualified specialist engineer.
- f. **Under No Circumstances** must this fire be used without the Glass Panel or if it is broken damaged or cracked.
- g. The Matrix in the fire is a Moulded Ceramic Fibre component incorporating Silicone Binders and you may notice that it develops cracks during operation. This is natural shrinkage caused by exposure to high temperatures and is quite normal for the material and will in no way affect the operation of the fire.

**FENTON CF  
INSTALLATION & SERVICING INSTRUCTIONS**

**RECORD DATA TO BE COMPLETED & KEPT BY USER:**

**IMPORTANT : THE FENTON CF CAN ONLY BE USED WITH NU-FLAME'S CE APPROVED FRETS & FENDERS**

PLACE OF PURCHASE ..... DATE .....

ADDRESS & TEL. NO. ....  
.....  
.....

APPLIANCE SERIAL NO. ....

INSTALLED BY ..... GAS SAFE REG. NO. ....



## **SITE SURVEYING - SURVEYING THE PROPERTY PRIOR TO INSTALLATION**

### **THE FOLLOWING ARE RECOMMENDATIONS FOR SURVEYING AND ARE IN ADDITION TO THE REQUIREMENTS OF THESE INSTRUCTIONS, NATIONAL STANDARDS AND BUILDING REGULATION REQUIREMENTS.**

The following recommendations should be considered to try to avoid problems that will result in issues after the fire has been fitted.

- a) Downdraught can be a major problem which may result in return visits with problems after the fire has been fitted so:
  - i) Check the geographical position of the property taking account of any known downdraught issues in the area.
  - ii) Check any existing Properties for any special chimney terminals that would indicate downdraught problems.
  - iii) Check any existing fires for signs of downdraught, e.g. discolouration above the fire.
  - iv) Ask the Customer if they ever suffer from wind blowing down the chimney.
- b) With Pre-cast flues check the following:
  - i) Any signs of walls over heated both on adjoining walls and upstairs. Bring any issues found to the attention of the Customer.
  - ii) Check for any Cracks in the wall above the fire.
  - ii) Check the soundness of any connecting tubes in the loft area.
- c) Take account of the type, size and height of the chimney when considering the suitability of the fire being considered.  
For instance if the chimney is quite large or high a higher efficient fire may be more suitable or flue lining may need considering.
- d) Take account of the fire previously fitted and if the heat output will be sufficient for the room size and heat requirements of the room.
- e) Check the condition and soundness of the chimney before proceeding with the installation or any building work.
- f) Check any wall decoration around the fire for its suitability for withstanding temperatures especially with high efficient fires.
- g) Take account of the size of the room any large windows ensuring that the fire being considered will provide sufficient heat.  
Make the Customer aware if you feel this could be an issue.
- h) Check if the suitability of the Control being considered will meet the Customers requirements, specifically with people with arthritic problems. Consider if a High level or Remote Control System would be more suitable and make the Customer aware of the advantages.
- i) If an high efficient fire is being considered into an existing fire surround determine if it is a suitable material, for example some micro marble surrounds are prone to discolouration. Check for any signs of discolouration and make the Customer aware of the possible problem. You may wish to advise that a more suitable Fire Surround be considered.
- j) Carry out a gas soundness check on the current installation prior to Installation.

We would recommend that if you come across known problems in your area that you add them to the above survey points.

If you are unsure of any aspect of the Installation seek expert advice.

## 5. - INSTALLATION REQUIREMENTS (FENTON CF)

**THIS APPLIANCE MUST BE INSTALLED AND SERVICED BY A PROPERLY QUALIFIED, (IN ACCORDANCE WITH LOCAL & NATIONAL CODES), INSTALLATION ENGINEER.**

It is the Law in the UK that All gas appliances are installed by a competent person in accordance with the GAS SAFETY (INSTALLATION AND USE) REGULATIONS 1998 (As amended), the relevant British Standards for Installation work, Building Regulations, Codes of Practice and these Instructions. In the UK a Registered Installer is deemed competent. In the Republic of Ireland, all Irish Standards, Local Codes and Bord Gais recommendations should be adhered to. The Installation should also be carried out in accordance with the following where relevant:

1. BS5871 Part 2
2. BS5440 Parts 1 & 2
3. BS6461 Parts 1 & 2
4. BS6891
5. BS8303

Building Regulations and Standards issued as relevant by the Department of the Environment or the Scottish Development Department.

In the Republic of Ireland Installation should be carried out in accordance with IS813, ICP3, IS327, Building Regulations, Codes of Practice, these Manufacturers Instructions and any Rules In Force.

Particular Reference should be made to the Ventilation Requirements, for the UK this Appliance would not normally require any additional purpose provided ventilation, for the Republic of Ireland ventilation should be in accordance with IS813 Domestic Gas Installations.

Failure to comply with the above could leave the Installer Liable to Prosecution and Invalidate the Warranty.

### IMPORTANT


BEFORE PROCEEDING WITH THE INSTALLATION READ THESE INSTRUCTIONS CAREFULLY. THESE INSTRUCTIONS SHOULD BE LEFT WITH THE USER FOR SAFE KEEPING AND FUTURE SERVICING. PRIOR TO INSTALLATION ENSURE THAT THE GAS TYPE AND PRESSURE ARE AS STATED ON THE APPLIANCE DATA BADGE.

## 6. - APPLIANCE DATA

- a. Gas Type: See Data Plate, (Natural Gas at 20mbar or Propane at 37mbar).
- b. Burner Pressure: Natural Gas 16.9mbar (Thermostatronic & High Level Controls) 19.0mbar (Manual Control) cold.  
: Propane 36.6mbar cold.
- c. Control System: Manual or Thermostatronic (Fully Sequential) Control System operated by Handset pointed at Receiver.
- d. Fire Safety: Oxygen Depletion & Flame Failure Device.
- e. Ignition: Manual-Integral Piezo Igniter, Thermostatronic-Full Sequential Control.
- f. Inlet Connection: 8mm Compression Fitting to Gas Isolation Elbow.
- g. Category: I2H, I3P.
- h. Injector: Natural Gas (G20)- 310 Multi hole. Propane (G31) - 160 Single hole.
- i. Heat Input: High: Natural Gas (G20) - 5.0kW Gross (4.5kW Nett) Propane (G31) - 4.73kW Gross (4.35kW Nett)
- j. Heat Input: Low: Natural Gas (G20) - 2.8kW Gross (2.5kW Nett) Propane (G31) - 2.7kW Gross (2.5kW Nett)
- k. Efficiency Class: 1. The Efficiency of this appliance has been measured as specified in BS7977-1:2009 + A1 2013 and the results obtained were Natural Gas 76.5% gross (84.9% Nett) and Propane 78.7% gross (85.6% Nett). The test data has been certified by BSI Group (0086) and can be used in the UK Government's Standard Assessment Procedure (SAP) for Energy Rating of Dwellings.
- l. Heat Output: High: Natural Gas (G20) - 3.82kW Propane (G31) - 3.72kW
- m. Heat Output: Low: Natural Gas (G20) - 1.73kW Propane (G31) - 1.75kW
- n. Pilot ODS Type: Natural Gas (G20) - P448D. Propane (G31) - P449.
- o. Nitrous Oxide (NOx) - 130mg/kWh.

## 7. - APPLIANCE DIMENSIONS

### FENTON CF DIMENSIONS

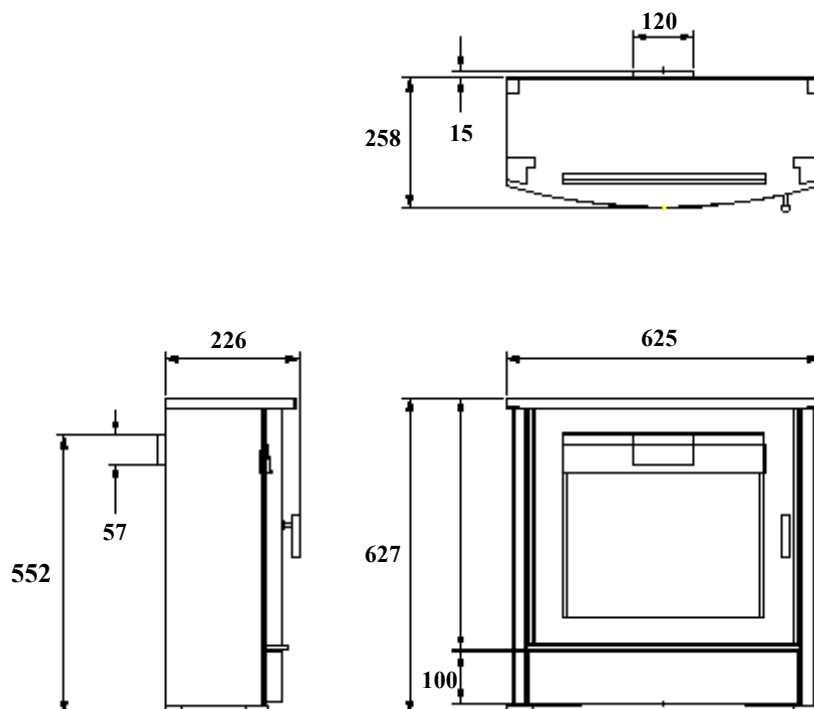

The diagram above shows the important dimensions only.

## 8. - FLUE REQUIREMENTS

### **These checks MUST be made before constructing the Builders Opening**

The Appliance is suitable for Installation into the following types of Flue:

- a. Conventional Stone/Brick Built Flue (Class 1) with a minimum cross sectional dimension of 175mm (7") with a minimum effective height of 3 meters.
- b. The flue **MUST** be free of any obstructions. Any dampers or restrictors **MUST** be removed. Some dampers are impractical to be removed; therefore they **MUST** be fixed in some way in the **OPEN** position.
- c. The chimney/flue should be swept if it has been used for solid fuel.
- d. A Flue Lined with a 5" Flexible Flue Liner connected to a Register Plate fitted and sealed at the top of the Builders Opening with a minimum effective height of 3 meters.
- e. A Pre-cast Flue with Starter Blocks conforming to BS1289: 1975, 1986, or 1989 or BS EN1858 and having a minimum cross sectional flue of 198mm by 67mm and Starter Blocks providing 115mm deep by 304mm wide with a minimum height of 555mm. No part of the Pre-cast Flue must be less than 63mm.
- f. The Fire may be used in conjunction with a Fully Sealed Rebated 150C rated or Equivalent Purpose Built Fire Surround.
- g. Any Pre-Cast Flue must be Sound and Free from Obstructions (Mortar Fangs or Protrusions into the Flue Way) and have an effective height of over 3 meters.
- h. For Pre-cast Flues the walls should be dry-lined over the route of the flue to prevent cracking.
- i. A Purpose Designed Flue Box to BS715 fitted with a 5" twin walled flue with a minimum effect height of 3 meters. Details are available from your authorised supplier.
- j. Ensure that only one fireplace is served by the flue system.
- k. Ensure that the chimney/flue is continuous from inlet to termination.
- l. Ensure that the chimney/flue is structurally sound, so that combustion products do NOT come into contact with combustible materials outside the chimney.
- m. **CHECK FLUE PULL.** Apply a smoke match or smoke generator to the flue opening at hearth level and observe smoke. If there is a definite flow into the flue aperture, proceed with installation. If there is not a definite flow into the flue aperture, preheat the flue for approximately 10 minutes and re-test. If there is not a definite flow towards the flue aperture the flue may need attention.

**DO NOT FIT THE APPLIANCE, SEEK EXPERT ADVICE.**

## 9. - VENTILATION

- a. No additional purpose provided ventilation is normally required for the fire when installed in the UK; however this **must** be confirmed by the Spillage Test, see Section 18.2.
- b. For other Countries refer to National Regulations and Local Codes.
- c. This appliance is fitted with an oxygen depletion sensing system, which automatically shuts off the gas supply to the fire if the oxygen level in the room is depleted, due to lack of primary air, or obstructed flue that would lead to incomplete combustion of the gas. It **must not** be tampered with and only replaced with a genuine Nu-Flame ODS Pilot.

## 10. - GAS SUPPLY

### **It Is Recommended to Check The Next Section as Building Work May Affect the Gas Supply Routing.**

- a. Carry out a gas soundness test before working on the gas supply.
- b. Gas supply provision should be made in accordance with the latest Gas Safety (Installation and Use) Regulations as amended.
- c. Confirm that the fire has been supplied for the correct gas to be used by checking the Data Badge in the base of the fire.
- d. A route for a concealed gas supply is provided through a hole in the rear of the fire, at a position of 83.5mm to the left of the centre of the fire and 28mm up from the base of the Fireplace/Builders opening. An isolation elbow is provided at the control inlet. Your 8mm gas supply pipe needs to protrude through the back of the convector box by approximately 145mm to achieve a neat connection onto the back of the isolator elbow on the burner. (This applies to both Manually Controlled and Thermatronic Radio Frequency Controlled burners.)
- e. Where the gas supply passes through walls, floors, voids, concrete and wall cavities the supply should be sleeved.
- f. Determine the gas supply pipe size required taking into account any other gas appliances.
- g. Determine where the gas supply pipe needs to terminate and fit the 8mm compression isolation/pressure test elbow provided.
- h. In common with all other gas appliances, dirt and debris in the gas system can block the valve and gas injectors on this appliance, and faults caused by this are not covered by the guarantee. Therefore it is important that all gas pipes **must** be purged of both air and debris.
- i. If you suspect that there may still be dirt and/or debris in the gas system, fit a filter in the pipeline, before the gas isolation/pressure test elbow.
- j. Do **not** use jointing compound on any compression fittings on the fire. The use of jointing compound on the compression joints on this appliance will possibly invalidate the guarantee, as it can get into the control mechanism and cause a malfunction.
- k. Seal off the isolation/pressure test elbow and check all gas connections for gas soundness before proceeding to fit the fire.

**! IMPORTANT NOTE !** Always reseal the pressure test point and check that it is gas tight.  
(This accounts for a lot of recalls.)

**Sections 11 - 13 are for the various Installation Applications - Only one will apply.**

**! IMPORTANT NOTE ! The chosen installation should have been predetermined and arranged before installing the fire.**

**Ensure you refer to the section relevant to your requirement.**

The Installation Applications Options Are:

- 11.0 Installation into a Class 1 or Lined Flue with a 150°C rated Fire Surround fitted to a Suitable Fireplace Opening.
- 12.0 Installation into a Pre-cast Flue. (Fire Surround Requirements)
- 13.0 Installation into a BS 715 Shallow Flue Box with Twin Wall 5" Flue, False Chimney Breast with Fire Surround Requirements.



**11. FIRE SURROUND APPLICATION INTO CLASS 1 OR LINED FLUES**

**FIREPLACE CONSTRUCTION**

**11.1 - FIRE SURROUND APPLICATIONS**

Fireplace Construction

Fireplace Minimum Requirements

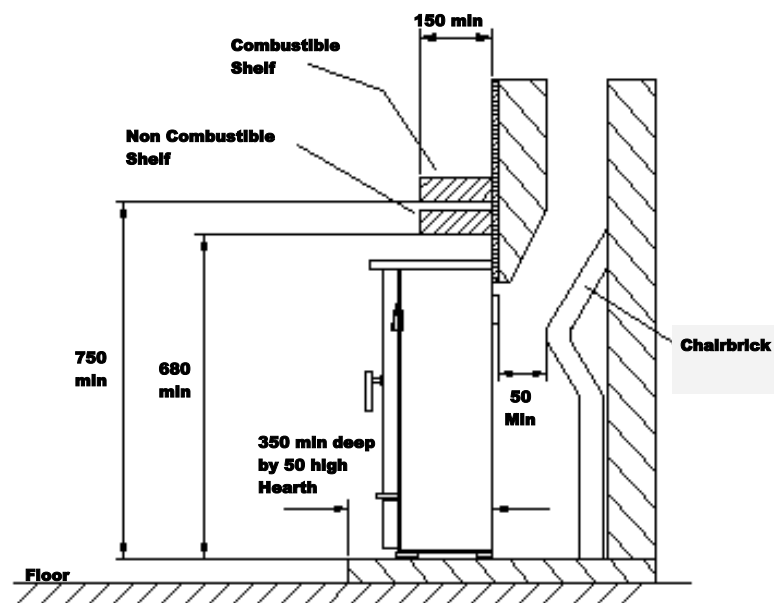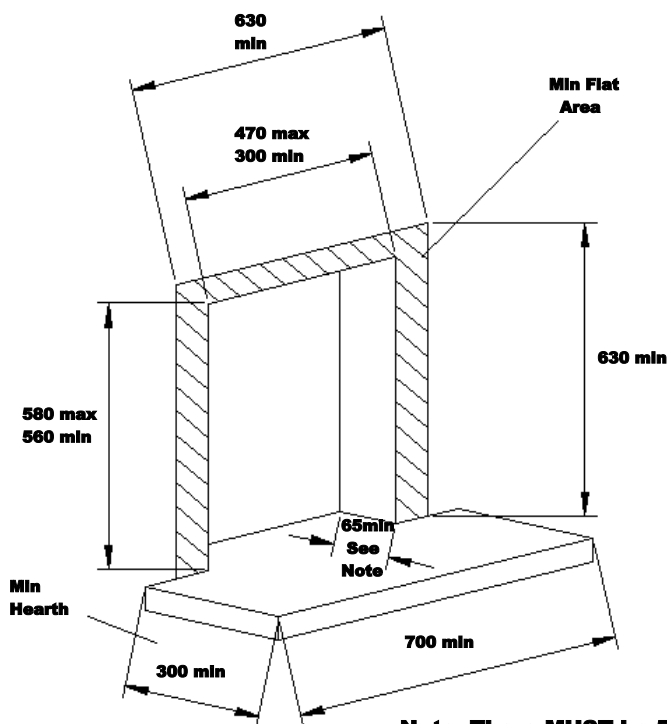

**Note: There MUST be 50mm minimum depth from the end of the Spigot**

There must be no combustible materials inside the fireplace opening.

## 11.2 - FIRE SURROUND REQUIREMENTS (See diagram in section 11.1)

- a. If the Fire is to be fitted into a purpose made Fire Surround it must have a temperature rating of 150°C.
- b. Where the fire is to be fitted into an existing 16" chair brick a minimum depth of 65mm must be provided to ensure there is 50mm minimum from the spigot to any part of the chairbrick. This will allow sufficient volume for Debris.  
If sufficient depth is not available the rear of the Chair Brick should be removed or extra depth added to the front.
- c. The Fire requires a non-combustible hearth with a upper surface of at least 12mm thick.
- d. The surface of the hearth must stand at least 50mm above the floor and level with the fireplace opening.
- e. The hearth must project at least 300mm in front of the fireplace opening and 150mm either side (700mm minimum hearth width).
- f. The base of the fireplace must be flat, level and square to the face of the fireplace opening.
- g. The Surround must cater for a minimum flat surface around the Fireplace Opening allowing 630mm high by 630mm wide.  
This is essential in order to achieve a good seal between the face of the surround and the fire.
- h. The Fire Surround must be fully sealed to the Fireplace Opening to ensure a good flue seal.
- i. The Fireplace Opening should have provision for a gas supply through the rear, see Section 10 Gas Supply.
- j. The Thermatronic fire is fitted with Electronic Equipment, which is sensitive to dampness and high humidity so it is very **important** that any rendering/building work is allowed to thoroughly dry out before Installation.

**! IMPORTANT NOTE !** Dry lined walls – ensure that any air gaps between the back of the plasterboard and wall are sealed around the builders opening or fireplace as this can affect flue pull and wall staining.

## 11.3 - CLEARANCES TO COMBUSTIBLE MATERIALS AND SHELVES (Ref: Diagram in section 11.1)

- a. A 150mm deep **non combustible** shelf can be fitted above the fire and should be positioned at least 680mm above the hearth.  
For deeper non-combustible shelves they must be raised a further 25mm for every extra 25mm of depth.
- b. A 150mm **combustible** shelf can be fitted above the fire but must be positioned at least 750mm above the hearth.  
For deeper combustible shelves they must be raised a further 25mm for every extra 25mm of depth.
- c. The sidewalls of a combustible fire surround can be 250mm from the inside of the builders/fireplace opening provided its depth is no more than 150mm, however this must be increased by 25mm per side for every extra 25mm of depth.
- d. With all heating appliances, soft furnishings, decorations and wall coverings may discolour or scorch if placed too close.
- e. No combustible material, e.g. curtains must be closer than 500mm to the builders opening.
- f. Any combustible wall claddings (wall paper) must be cut back to a height of 750mm and 300 mm either side of the Fireplace Opening.
- g. Due to the heat output of The Fenton CF it is **not recommended** to use blown vinyl wall covering around the fire.


**NOW PROCEED TO SECTION 14 - FIXING THE FIRE.**

**12. INSTALLATION INTO A PRE-CAST FLUE  
(Fire Surround Requirements)**


**12.1 - EXISTING MINIMUM PRE-CAST FLUE FIREPLACE REQUIREMENTS**

**! IMPORTANT NOTE !** THERE ARE NUMERIOUS DIFFERENT SIZES OF PRECAST FLUE FIREPLACES AND THE FOLLOWING DETERMINES THE MINIMUM REQUIREMENTS AND THE ADDITIONAL BUILDING WORK REQUIRED.

**Pre-Cast Fireplaces  
Minimum Requirements**

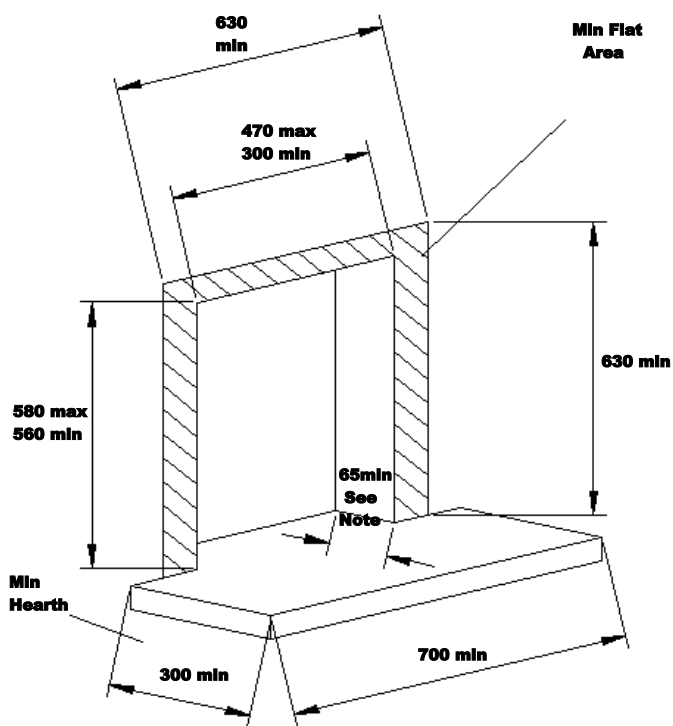


**Pre-Cast Flue Application  
With Fire Surround or  
Equivalent**

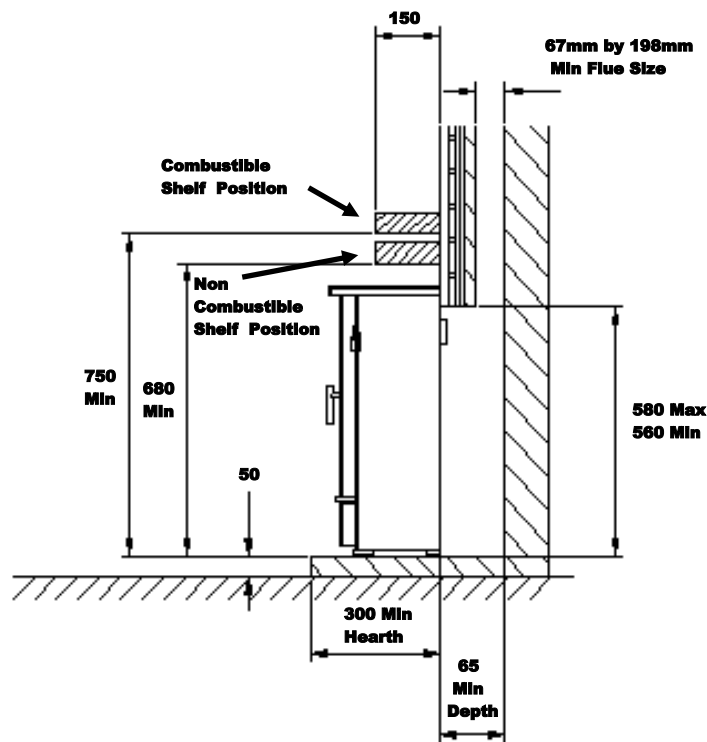

**Note: There MUST be 50mm minimum depth from the end of the Spigot**

**Pre Cast Flue Fireplace  
Depth Construction**

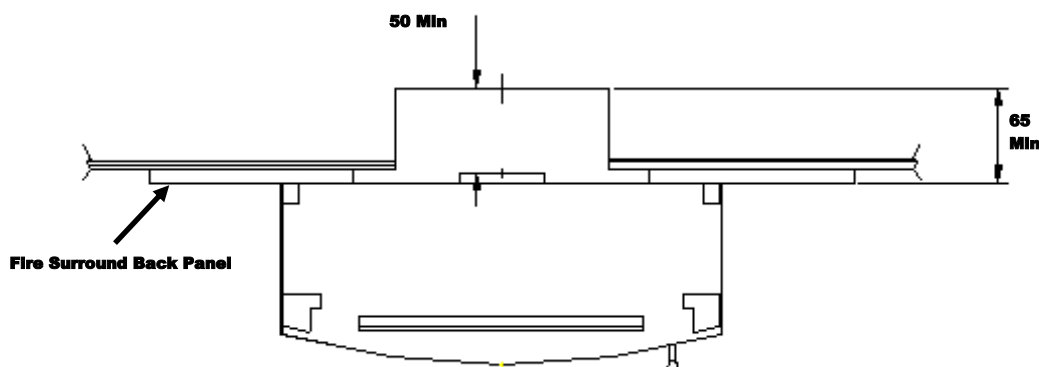

There must be no combustible materials inside the builders opening.

## 12.2 - FIREPLACE MINIMUM REQUIREMENTS (See diagram in section 12.1)

With the Majority of Pre-Cast Flue Fireplaces there should be sufficient depth-width however the minimum Dimension shown in the diagram on the previous page must be provided

- a. The Minimum Pre-cast Flue Size is 67mm deep by 198mm wide with Starter Blocks providing a Minimum Depth of 115mm by 305mm wide. No part of the Flue must be less than 63mm.
- b. The height of the Pre-cast Fireplace opening must be between 555mm and 580mm. If the Starter Blocks have not been provided down to Floor level then building work will be required.
- c. Where the Pre-cast Flue Fireplace with Starter Blocks provide less than minimum depth of 65mm and width of 305mm a purpose built extension will be required.  
This Extension must be made of Non Combustible materials and fully sealed to the Existing Fireplace.
- d. With more up to date Pre-cast Fireplaces the minimum dimensional requirements may be available with no additional building work.
- e. If the Fire is to be fitted with a Rebated Fire Surround it must have a temperature rating of 150°C.
- f. The Fire Surround must be fully sealed to the Fireplace Opening to ensure a good flue seal.
- g. The Fire requires a non-combustible hearth with an upper surface of at least 12mm thick.
- h. The surface of the hearth must stand at least 50mm above the floor and level with the fireplace opening.
- i. The hearth must project at least 300mm in front of the fireplace opening and 150mm either side (700mm minimum hearth width).
- j. The base of the fireplace must be flat, level and square to the face of the fireplace opening.
- k. The Surround must cater for a minimum flat surface around the Fireplace Opening allowing 630mm high by 630mm wide.  
This is essential in order to achieve a good seal between the face of the surround and the sealing flanges of the fire.
- l. The Fireplace Opening should have provision for a gas supply through the rear, see Section 10 Gas Supply.
- m. The Thermatronic controlled fire is fitted with Electronic Equipment, which is sensitive to dampness and high humidity so it is **Very Important** that any rendering/building work is allowed to thoroughly dry out before Installation.

**! IMPORTANT NOTE !** Dry lined walls – ensure that any air gaps between the back of the plasterboard and wall are sealed around the builders opening or fireplace as this can affect flue pull and wall staining.

Pre-Cast Flues – ensure the walls are dry lined over the route of the flue otherwise wall cracking will occur.

## 12.3 - CLEARANCES TO COMBUSTIBLE MATERIALS AND SHELVES (Ref: Diagram in section 12.1)


- a. A 150mm **non combustible** shelf can be fitted above the fire and should be positioned at least 680mm above the hearth.  
For deeper non-combustible shelves they must be raised a further 25mm for every extra 25mm of depth.
- b. A 150mm **combustible** shelf can be fitted above the fire but must be positioned at least 750mm above the hearth.  
For deeper combustible shelves they must be raised a further 25mm for every extra 25mm of depth.
- c. The sidewalls of a combustible fire surround can be 250mm from the inside of the builders/fireplace opening provided its depth is no more than 150mm, however this must be increased by 25mm per side for every extra 25mm of depth.
- d. With all heating appliances, soft furnishings, decorations and wall coverings may discolour or scorch if placed too close.
- e. No combustible material, e.g. curtains must be closer than 500mm to the builders opening.
- f. Any combustible wall claddings (wall paper) must be cut back to a height of 750mm and 300 mm either side of the Fireplace Opening.
- g. Due to the heat output of The Fenton CF it is **not recommended** to use blown vinyl wall covering around the fire.

**NOW PROCEED TO SECTION 14 - FIXING THE FIRE.**


# 13. BS 715 SHALLOW FLUE BOX WITH TWIN WALL 5" FLUE FALSE CHIMNEY BREAST CONSTRUCTION WITH FIRE SURROUND

## 13.1 FALSE CHIMNEY BREAST CONSTRUCTION

### Shallow Flue Box Application

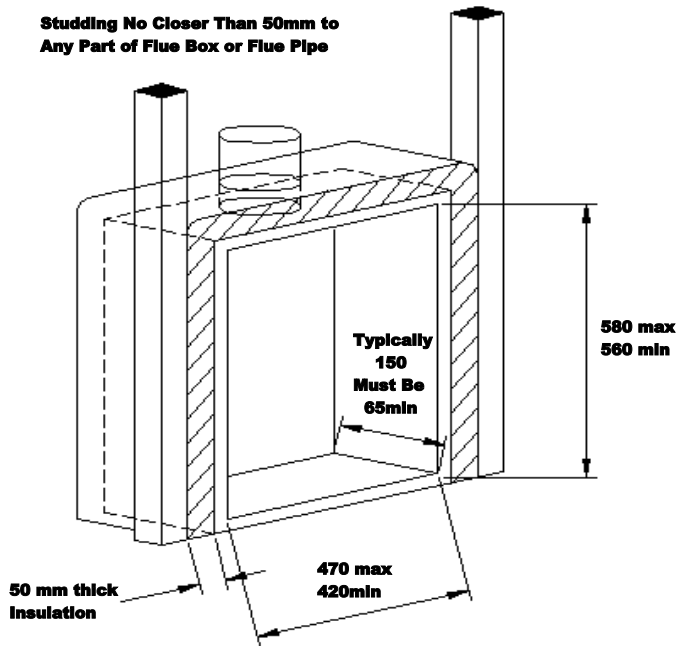

### Hearth Mounted BS715 Flue Box

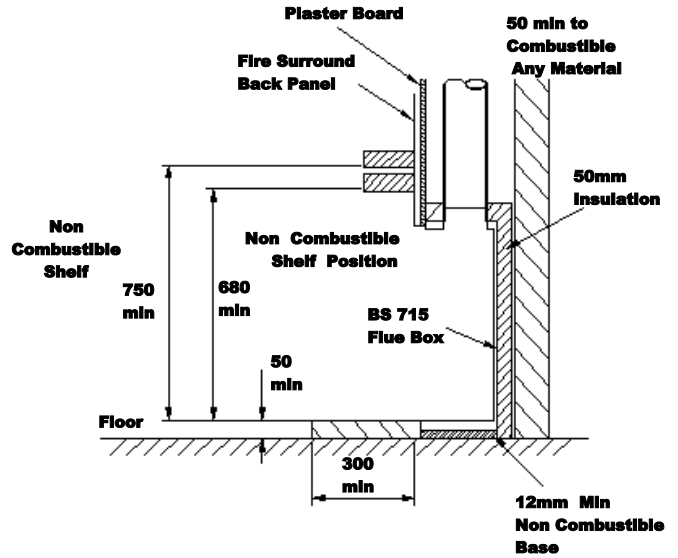


### IMPORTANT

Where The Flue Box Only As An Internal Width of 407mm then the Plaster Board or Surround Back with a Minimum Opening Width of 420mm is Required see the Diagram Below.

### A Typical Shallow Flue Box

There must be no combustible materials used inside the flue box.

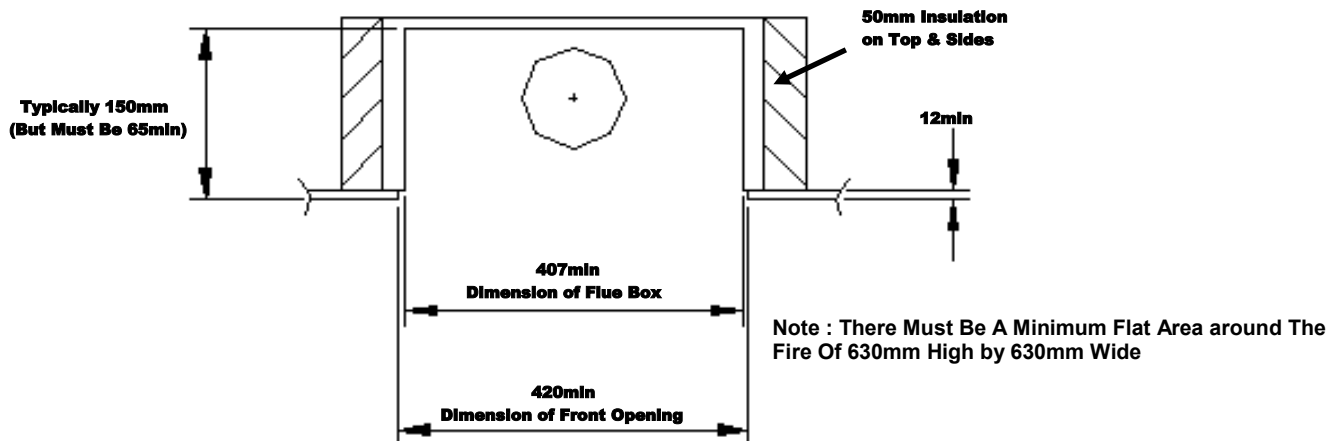

## 13.2 – BS 715 FLUE BOX BUILT INTO A FALSE CHIMNEY BREAST WITH FIRE SURROUND OR HOLE IN THE WALL INSTALLATION WITH REQUIREMENTS (See diagrams above).

A BS 715 Flue Box can be built into a false chimney breast and installed at floor level with a suitable Fire Surround.

or  
The Fire can be Built-In part way up the wall to create a Hole in the Wall Installation, however it is essential to use marble, slate or stone slips, fitted around the builders opening. The slips must have a temperature rating of 150°C and be 20mm (min) thick by 100mm (min) wide. In order to direct the flow of heated air away from the wall we recommend that a non combustible shelf (lip) is fitted above the top slip, protruding 30mm – see diagram.

If a Combustible shelf is to be fitted then the top Slip must extend up to the underside of the shelf.

- A suitable BS715 Shallow Flue Box should be used with the minimum dimensions quoted above.
- The base of the Flue Box must be level and square to the face of the fireplace opening.
- The Flue Box must sit on Non Combustible Material of at least 12mm Thick.
- The Flue Box can be placed against a Non Combustible wall at the rear, however if the wall is combustible it must be spaced 50mm from the wall.



- e. When building a False Chimney Breast No Combustible materials must be closer than 50mm to the Flue Box.
- f. No Combustible materials must be closer than 50mm to the Twin Wall Flue over its entire route through the Property.
- g. The Flue Box must be Insulated on its top and sides with 50mm thick Non Combustible Fibreglass Insulation or Equivalent.
- h. If plaster board is used in front of the flue box it must be sealed to the box with high temperature Silicone Sealant or an equivalent flexible sealant.
- i. If the Fire is to be fitted with a purpose made Fire Surround it must have a temperature rating of 150°C.
- j. The Fire requires a non-combustible hearth with an upper surface of at least 12mm thick.
- k. The surface of the hearth must stand at least 50mm above the floor and level with the fireplace opening.
- l. The hearth must project at least 300mm in front of the fireplace opening and 150mm either side (700mm minimum hearth width).
- m. The Surround must cater for a minimum flat surface around the Fireplace Opening allowing 630mm high by 630mm wide.  
This is essential in order to achieve a good seal between the face of the surround and the sealing flanges of the fire.
- n. The Fire Surround must be fully sealed to the Fireplace Opening to ensure a good flue seal.
- o. The Fireplace Opening should have provision for a gas supply through the rear, see Section 10 Gas Supply.
- p. The Thermatronic fire is fitted with Electronic Equipment, which is sensitive to dampness and high humidity so it is **very important** that any rendering/building work is allowed to thoroughly dry out before Installation.

**! IMPORTANT NOTE !** Do not forget to take account of the difference in height of the base of the Flue Box when mounting the box on the floor; it must be level with the Hearth.

### 13.3 - CLEARANCES TO COMBUSTIBLE MATERIALS AND SHELVES (Ref: Diagrams on Page 19)

- a. For Fire Surrounds with a 150mm **non combustible** shelf it must be fitted above the fire at least 680mm above the hearth.  
For deeper non-combustible shelves they must be raised a further 25mm for every extra 25mm of depth.
- b. For Fire Surrounds with a 150mm **combustible** shelf it must be fitted at least 750mm above the hearth.  
For deeper combustible shelves they must be raised a further 25mm for every extra 25mm of depth.
- c. Any combustible sidewall must be at least 500mm from the inside of the builders/fireplace opening, however with a non combustible fire surround it can be 250mm from the inside of the builders/fireplace opening provided it does not protrude more than 150mm and this must be increased by 25mm for every extra 25mm of depth.
- d. With all heating appliances, soft furnishings, decorations and wall coverings may discolour or scorch if placed too close.
- e. No combustible material, e.g. curtains must be closer than 500mm to the builders opening.
- f. Any combustible wall claddings (wall paper) must be cut back to a height of 750mm and 300 mm either side of the Fireplace Opening.
- g. Due to the heat output of The Fenton CF it is **not recommended** to use blown vinyl wall covering around the fire.

**NOW PROCEED TO SECTION 14 - FIXING THE FIRE.**

## 14. FIXING THE FIRE

### 14.1 - FITTING The Silicone Sealing Strip (Heat Engine & Fenton Case)

#### Heat Engine.

It is very important that a good seal is achieved between the Heat Engine Back Box flanges and the front of the fireplace back panel/wall for safety reasons and to achieve maximum efficiency. Take the self adhesive silicone sealing strip from the fitting kit and neatly apply to the flanges of the back box as shown, (apply as close to the edge as possible), cutting to the appropriate lengths as required. To also ensure there is a good seal between the base of the Heat Engine and the hearth apply a length of self adhesive silicone sealing strip to along fire bottom flange of the back box. The foam seals will ensure that when the Heat Engine is fixed to the Fireplace/Builders opening it will be fully sealed ensuring the flue draw isn't affected.



#### Fenton Case

Also apply Sealing Foam to the back flanges of the Fenton case.



### 14.2 - FITTING THE Fire –reference should be made to the photographs

- Using a Dust Sheet or equivalent protect the area around the Fire Installation.
- Remove the Fire from the box and lay it on its back. Using the Screw Driver provided slacken the 2 Screws at the Bottom Left and Right corners Securing the Glass Frame and ease it outward slightly at the base then pull down and remove.



**! IMPORTANT NOTE ! TAKE GREAT CARE WHEN WORKING INSIDE THE FIRE NOT TO MARK THE CERAMIC LINING PANELS.**

- Now with the fire on its Base, now remove the Glass Frame Assembly by firstly remove the 2 screws holding Front Coal Support.



- Now remove the Burner Assembly by taking out the 2 screws towards the back then slide the Assembly forward taking care not to Mark the Liners, if the fire is fitted with a Remote Control System then slide out the Receiver Box noting how it fits snugly at the right side.



- Remove the Debris Plate at the back by removing the 2 screws allowing access through the Debris Duct for fitting the Gas Supply.
- There are fixing holes in the front side flanges which can be used if there is sufficient strong material for fixing. We don't however recommend drilling/fixing through a Fire Surround Back Panel as this could later cause cracking. We do however recommend our cable fixing system which is supplied to secure the unit into the fireplace. The cable fixing system will also pull the unit tight back into the fireplace to make a good seal. This is very important to ensure efficient and safe operation of the fire.

See details with diagram of the Cable Fixing System on the next page .

- g. Make reference to the diagram below.
- h. There are 2 cables supplied; 1 to be used each side of the unit.  
and Working at 200mm centres in the builders opening drill the lower holes 27mm up from the base and drill the higher holes 510mm up from the base see drawing below. Secure the 4 Eyebolts supplied with the Raw plugs to the back of the fireplace.  
Ensure the Eyebolts are fully screwed in.  
**IMPORTANT: ENSURE THE MATERIAL THE EYEBOLT/RAWPLUG IS FIXED INTO IS SOLID AND SOUND.**  
If the fixing is not sound the Rawplug/Eyebolt will be pulled out and the fire will not be sealed to the Fireplace Opening.

**Note: With the minimum depth fireplace enclosure it may be necessary to sink the Eye Bolt Heads into the Brickwork.**


**Reference Should Be Made To The Diagram Below**

- i. There are 2 holes in the Back Box of the fire; 1 each side towards the top. Feed a cable through each hole.
- j. Then feed the cables through the eyebolts on either side and then through the holes in the back of the Back Box.
- k. Slide the Fire **part way** up against the fireplace (leaving it sticking out approximately 50mm) checking the gas supply pipe and isolation/pressure test elbow clears through the Debris Duct into the front of the Fire.
- l. Slide the Fire fully home ensuring that the sealing strips on the rear of the Back Box outer frame stay in position to make a seal against the fireplace back panel. While sliding the unit into the fireplace opening pull on the excess cable.
- m. Locate the supply pipe into the slot in the Debris Opening and replace the Debris Plate.
- n. The Cable Fix Adjuster and Lock Screw can now be fitted through the hole in the Back Box onto the cable and tightened up to tension the fire back into the fireplace.  
The fire should be secure and not liable to movement.  
*Surplus fixing cable MUST NOT be cut off and must be tucked back through the central hole in the Back Box.*  
*This is particularly important with the Thermatronic Control System to keep the cables away from any electronics.*
- o. If any of the silicone sealing strips are not compressed and/or if there are gaps they must be filled with a suitable sealant, ideally high temperature silicone or fireclay. Refit the Burner/Controls Assembly with the 2 screws and with the Thermatronic Control System slide the Receiver Box into place if it as come out of place.

**IMPORTANT : AFTER FITING THE PIPEWORK ENSURE THE PIPES ARE FREE OF DEBRIS AS THIS CAN CAUSE MAJOR ISSUES.**


- p. Connect the isolation/pressure test elbow to the control valve and with it fully open check the joint for gas soundness.
- q. Check that all gas connections are sound. The appliance has been factory tested; however the connections may have been disturbed in transit or storage.

**! IMPORTANT NOTE !** Always reseal the pressure test point and check that it is gas tight. (This accounts for a lot of recalls.)

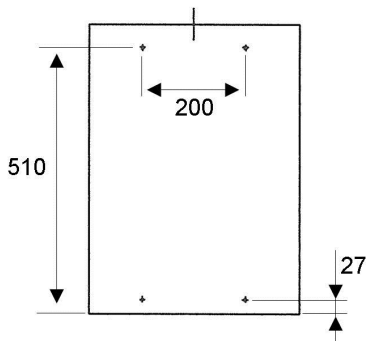

**Hole Positions in back of Fireplace Opening**

**Side View Of Cable System**

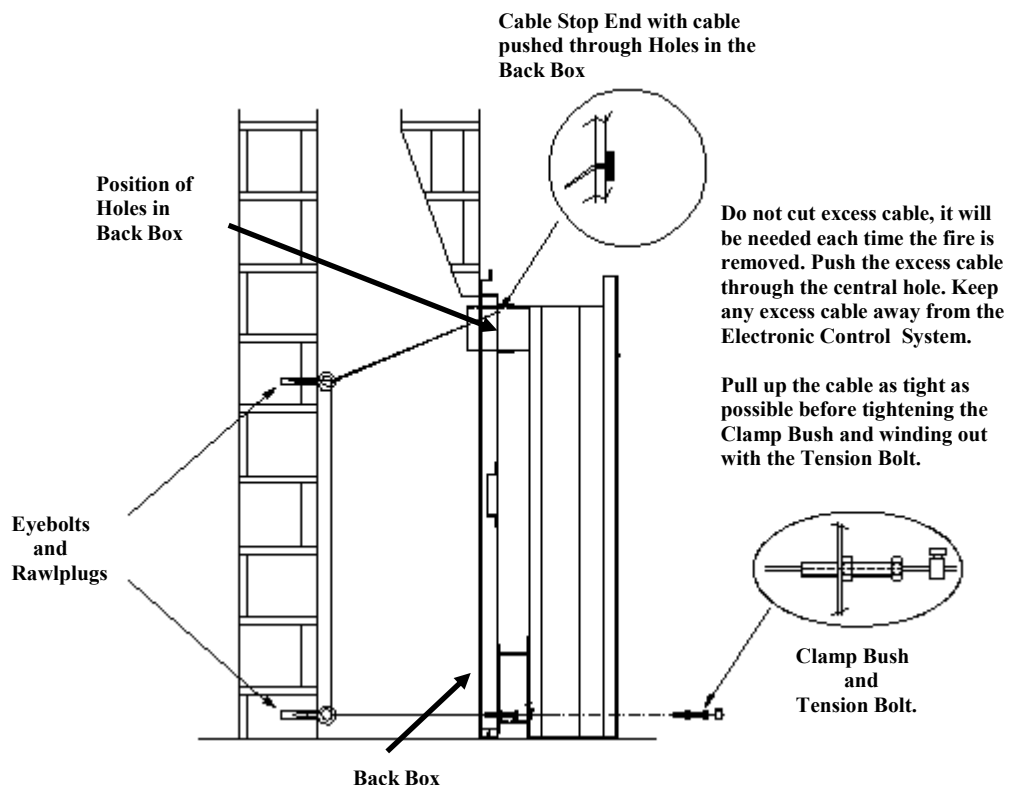

## 15. - ARRANGEMENT OF THE FUEL EFFECT.

### Health & Safety Advice Refractory Ceramic Fibre (RCF) Advice when working with Fuel Bed Components including Installing, Servicing and Disposal.

The Fuel Effect parts and possible Linings of this fire are made from Refractory Ceramic Fibre (R.C.F.) a Class 2 Carcinogen which is a material designed for this Application. Excessive exposure to these types of materials may cause temporary irritation to eyes, skin and respiratory tract. Therefore take care when handling these articles to ensure dust is kept to a minimum.

It is not necessary to wear protective clothing when handling these articles but we do recommend you follow the normal hygiene rules of not smoking, eating or drinking in the work area, and always wash your hands before eating or drinking.

To minimise the release of RCF fibres during installation and servicing a HEPA filtered vacuum is recommended to remove any dust accumulated in and around the fire both before and after working on it.

When Servicing and if replacing these parts we do not recommend they are broken up but are sealed within a heavy duty polythene Bag and labelled as "RCF waste". This is not classified as "hazardous waste" and may be disposed of at a local licensed landfill site.

### Fitting the Fuel Effect Parts

Remove all the Fuel Effect parts & familiarise yourself with each part. The Fuel Effect depends on the one ordered be it the Coal Fuel Bed or the Wood Fuel Bed.

Both the Coal and Wood Fuel Effects have a common Back Matrix (sits at the back of the burner, see 'a' below).

The additional Fuel Effect Parts are detailed below.

#### Coal Fuel Bed:

You will see that there are 3 individually wrapped Large Coals pieces plus three small bags containing the following Loose Coals : 3off Long Larger 'K' coals, 11off marked 'J' Coals and 6off marked 'G' Small coals.

#### Wood Fuel Bed:

You will see there are 3 individually wrapped Large Wood pieces plus 5off Smaller Wood pieces marked 1 to 5.

**! Tip ! TAKE CARE NOT TO DAMAGE THE LINER PANELS INSIDE THE FIRE WHEN FITTING THE FUEL BED.**

### The First Stage 'a' is common to both the Coal & Wood Effects


- a. Fit the Rear Matrix behind the Burner as shown. Ensure it is sat up against the back with the word 'TOP' facing you.



**FOR COAL EFFECT PLEASE READ ON FOR WOOD EFFECT TURN TO PAGE 24**

### 15.1 - ARRANGING THE COAL EFFECT

- a. Slide the Front Moulded Coal into positions between Front Heat Shield and Burner as shown.

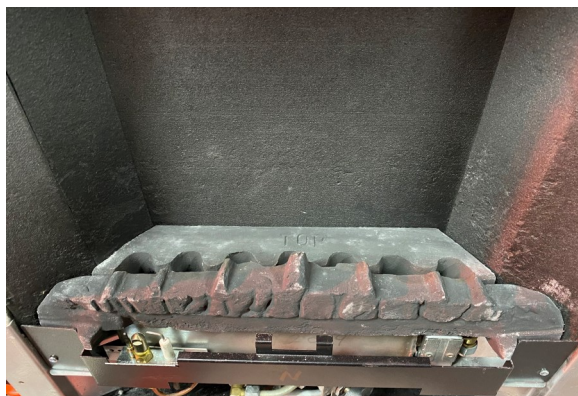

- b. Fit the Rear Coal ensuring it is up against the back board as shown.



**When Fitting the Loose Coals ensure the Engraved Identification Letters are Not Visible**

- c. Take 3 off 'K' coals from the bag and position the first centrally with a flat side up against the back and the other down on to the Rear Coal. Then place the others either side leaning against the centre Coal as shown.



- d. Take 2 off 'J' coals and place either side of coals just fitted as shown.



**IMPORTANT**

**WHEN FITTING ANY COALS ALONG THE FRONT ENSURE THEY DO NOT PROTRUDE INTO THE FLAME GROOVES.**

- e. Take a further 4 off 'J' coals and place them level with the front and centrally on top of the Front Coal as shown.



- f. Fit 2off 'J' coals sloping outward at the front towards the LH & RH sides as shown.



- g. Fit 2off Small 'G' Coals into the Front LH & RH corners as shown.




- h. Fit 3off 'J' Coals along the front on top of those fitted earlier as shown.



- h. Fit 2off small 'G' Coals along the front one either side of those just fitted as shown.



- h. Finally fit 2off small 'G' Coals on top of the LH & RH corner coals fitted 'g' as shown.

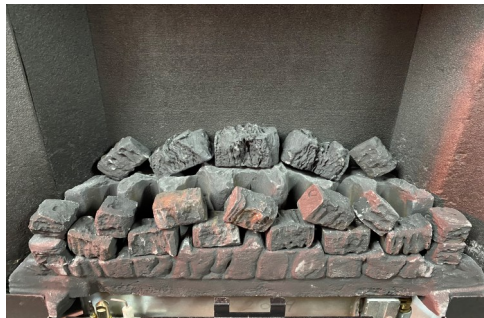

**Too Check The Layout Look At The Next Page**

The Picture Below Identifies The Lettered Coal Size Positions for Cross Checking.

Very Important  
Ensure No Coals Are  
Placed Within The  
0  
Flame Grooves



**IMPORTANT:** Finally Adjust The Coals to Ensure None Of The Letter Markings Can Be Seen.

**Note:** Any Coals Placed In The Flame Grooves Will Result In Sooting and Flames Flowing Towards The Glass Panel

#### IMPORTANT

Before fitting the glass panel with the 2 screws and screw driver provided, check the condition of the glass and also ensure it is clean and free from any finger marks.

**Note:** The glass is etched with the Nu-Flame logo and the glass is to be positioned with the logo in the bottom right hand corner.

**Now Proceed to Section 16. - Testing, Commissioning & Use on Page 26**

## 15.2 - ARRANGING THE WOOD EFFECT

- a. Slide the Front Moulded Wood piece into positions between Front Heat Shield and Burner as shown.



- b. Fit the Rear Wood Piece ensuring it is up against the back board as shown.



**NOTE: THERE ARE HIGHLIGHTED AREAS TO HELP POSITION EACH WOOD PIECE.**

- c. Fit No 1 Wood Piece at the far right side as shown.



- d. Fit No 2 Wood Piece next to the wood piece just fitted as shown. Ensure the lug extended under the Wood Piece is located into the Cavity in the Front Wood Piece.




- e. Fit No 3 Wood Piece in the Centre as shown.



- f. Fit No4 Wood Piece to the right of the wood piece just fitted as shown.



- g. Finally fit No 5 Wood Piece at the far right hand side as shown.

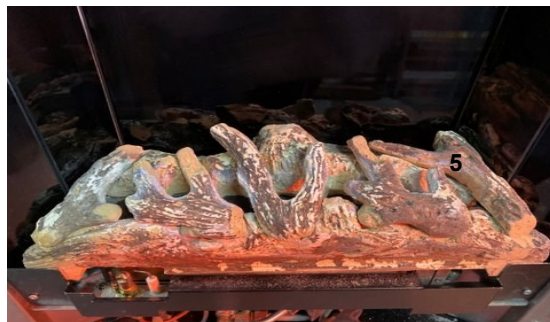

**See A Larger Photograph of the Final Wood Layout On The Next Page**



The Picture Below Identifies The Numbered Wood Size Positions for Cross Checking.



**IMPORTANT**

**Before fitting the glass panel with the 2 screws and screw driver provided, check the condition of the glass and also ensure it is clean and free from any finger marks.**

**Note:** The glass is etched with the Nu-Flame logo and the glass is to be positioned with the logo in the bottom right hand corner.

**Now Proceed to Section 16. - Testing, Commissioning & Use on Page 26**

## 16. - TESTING, COMMISSIONING & USE

- ! IMPORTANT NOTE !** During its first period of use any protective coatings and oils will burn out of the fire and it is wise to ventilate the room for the first hour; also advise the customer that this may persist for the first few days until the fire is fully burnt-in.


### 16.1 - LIGHTING THE FIRE

- Reference to Section 2 in the Users Instructions 'Lighting & Controlling the Fire' will show how to light and operate the fire.
- Check that the supply pressure to the fire is at the pressures required, 20mbar (Natural Gas G20) or 37mbar (Propane G31) when set at high.


- ! IMPORTANT NOTE !** Ensure that the pressure test point used is sealed and gas tight.

### 16.2 - TESTING FOR SPILLAGES

- A restrictor is supplied with the fire for flues that have an effective height greater than 3 meters.  
**The restrictor Must Not be fitted with Pre-cast Flue or with 5" Flue Box applications.**  
The restrictor is fitted into the duct above the glass panel with the 2 # No6 x10mm self tapping screws provided, see below.

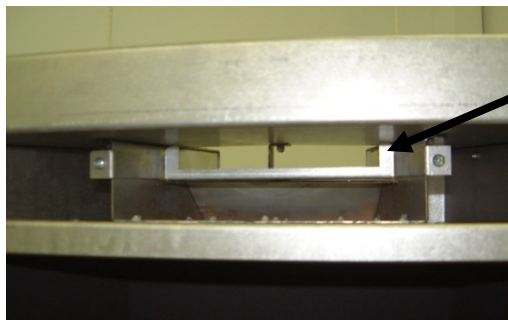

- Once the fire is operational the installer must check for spillage. Carry out the lighting procedure and turn the fire to high. Allow to warm up for 5 minutes and then using a smoke match, joss stick or similar, place it centrally in the duct above the glass panel as shown above. The majority of the smoke must be drawn into the duct. Some small whiffs of smoke may be expelled and this is quite normal. Be careful not to introduce too much smoke (i.e. by using a pellet). A smoke match tube can be used to make holding of the match easier. See following diagram.

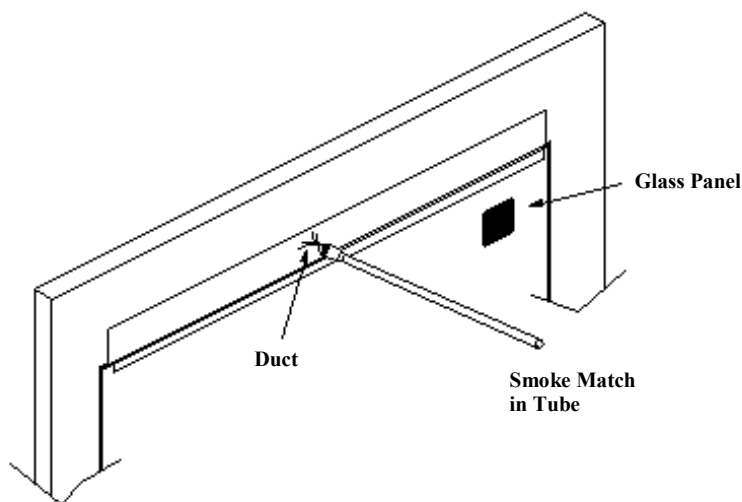

Light the Fire, wait 5mins, place  
A lit smoke match centrally above  
the glass panel just inside the Duct.  
The majority of the Smoke MUST be  
drawn into the Duct.  
Refer to Instructions for more details.

- Repeat the test with doors and windows to the premises/room both open and closed, and with any extractor fans in the same room or adjacent rooms running at high. The fire should continue to clear its combustion products. Also operate any other flued appliance in the same or neighbouring rooms and ensure they continue to function satisfactorily as multiple flues can work against one another.
- If spillage is detected during this procedure, remove the restrictor if fitted and repeat the tests.
- If spillage is detected and no restrictor is fitted, let the fire operate for a further 10 minutes and re-check.
- If the fire continues to spill, it could indicate a faulty flue or lack of ventilation. If the problem cannot be rectified immediately, disconnect the fire, affix a label and advise the customer not to use it until the problem has been resolved.
- It is an offence to use or allow the use of a dangerous appliance.**

### **16.3 - FITTING THE FENTON CASE (We would suggest that you look inside the back of case at the top to visually see the fixing flange).**

- a. Place the Case over the fire and slide it downward to hook the fixing flange onto the tabs on the Back Box, compressing the foam seal.
- b. Take the 2 screws supplied and fix to the fire through the 2 holes, at the bottom of the Case on each side.

### **16.4 - FIREGUARDS**

- a. A fireguard is not supplied with the appliance however it is strongly recommended that a fireguard is fitted if the fire is to be used in the presence of young children, the elderly, the infirm and pets.

### **17 - BRIEFING THE CUSTOMER**

- a. The installer should brief the customer on the Operation of the Control System and all aspects of the User Instructions. See Section 2.
- b. The Instructions and Glass Frame release Screw Driver should be handed to the customer for their safe keeping and future servicing.
- c. Although the Customer can remove the glass frame assembly for cleaning it will involve removing the Case which may not be an option for some Customers, however demonstrate how the Case, Glass Frame can be removed.
- d. For the Control Systems explain and demonstrate that the batteries in the Receiver and Hand Set should be replaced with good quality ones annually as the fire may stop working part way through the season.
- e. The customer should be briefed on the need for regular servicing; this will normally be once a year.
- f. Advise the customer that, apart from batteries for the Thermoatronic Systems, there are no user replaceable parts in the fire but for servicing and spares to contact the local Nu-Flame Stockist.
- g. Advise the customer that under no circumstances must the fire be used without the glass panel fitted or if it is in any way chipped, cracked or damaged.
- h. Advise the customer about the importance of checking and maintaining the Carbon Monoxide Alarm safety device.

**! VERY IMPORTANT MAKE THE CUSTOMER AWARE OF THE NOTE BELOW !**

**The glass panel and outer parts of this fire will become hot during use, cloths or combustible items must not be placed close to or on the fire. We recommend that a Fireguard conforming to BS8423 should be used for protection of Young Children the Elderly, Infirm and Pets.**

### **18 - SERVICING**

The Large Wood/Coal pieces and Rear Matrix in the fire are Moulded Ceramic Fibre component incorporating Silicone Binders and you may notice they it develop cracks during operation. This is natural shrinkage caused by exposure to high temperatures and is quite normal for the material and will in no way affect the operation of the fire.

#### **18.1 - GENERAL**

**Note: Servicing must be carried out by a registered installer.**

- a. The fire does not have to be removed for Servicing however you will need to remove the Case as detailed in 16.3.
- b. Check the operation and ignition of the fire before servicing.
- c. Ensure the fire is cold before proceeding.
- d. Lay a dust sheet on the floor before proceeding.
- e. Carry out a gas soundness test before servicing.
- f. Turn off the gas supply to the fire at the isolation/pressure test elbow.
- g. Remove the Glass Frame Assembly using the screw driver provided, ease slightly out at the base then slide it down.
- h. If any parts need replacement, use only genuine parts supplied by Nu-Flame Ltd. Some components may look similar to those used in other gas fire, but these are not necessarily the same due to performance variations and must not be used.  
**This applies particularly to the ODS Pilot, Gas Control System and Ceramics.**
- i. Disconnect the gas pipe to the control.

**Remind the Customer that in the interests of Safety they MUST maintain their Carbon Monoxide Alarm**

#### **18.2 – ANNUAL SERVICING**

**Carry out the operations in 20.1 General before proceeding**

**! IMPORTANT NOTE ! TAKE GREAT CARE WHEN WORKING INSIDE THE FIRE NOT TO MARK THE LINERS.**

- a. With the Glass Frame Assembly removed as detailed above check the Glass Panel for any damage, it must be replaced if there are any chips, cracks or any damage before the fire can be used.
- b. Referring to the Section 15, 'Arrangement of the Fuel Effect' & working in reverse order, remove the Coals/Wood pieces & the Rear Matrix.
- c. Remove the Burner/Control Assembly by firstly disconnecting the gas connection to the Isolation Elbow and then remove the 2 screws at the back before sliding the whole assembly forward and out of the fire.

**Take care not to mark the liners.**

**This will now allow access to all gas carrying parts for maintenance checks, fault finding and or replacement.**

- d. Remove the Debris Plate by removing the 2 screws allowing access through the Debris Duct and clear away any Debris.
- e. Brush clean the burner and pilot area of dust or debris; check that the aeration hole in the pilot is clear of dust.
- f. Refit in reverse order; brushing the coals/wood pieces clean of any soot, checking gas soundness, ignition and spillage as detailed in the relevant sections.
- g. Always Clean the outer glass panel before refitting. (For Stubborn Marks use 'T Cut Original').

**ALWAYS CONDUCT A GAS SOUNDNESS AND SPILLAGE CHECK AFTER SERVICING.**

**ALWAYS RESEAL THE PRESSURE TEST POINT AND CHECK THAT IT IS GAS TIGHT.** (This accounts for a lot of recalls.)

**ALWAYS CLEAN THE GLASS PANEL BEFORE REFITTING. SEE SECTION 3** (This accounts for a lot of recalls.)

**Note: Marks on the Glass Panel are Not Covered by the Manufactures Warranty.**

## 19 - FAULT FINDING GUIDE, SYMPTOMS AND POSSIBLE CAUSES

**Important:** In instances where it is indicating that the main control system needs changing, you should investigate returning the whole Burner Control System Assembly to Nu-Flame for Rectification as this could be the least cost option.

- a. Prior to any Servicing ensure that you have carried out the procedures in Section 18.1 General (Servicing).
- b. Check the supply pressure at the isolation elbow.
- c. **Important:** With the Thermatronic Systems always change the batteries before carrying out any Fault Finding.

### 19.1 - RESETTING THE THERMATRONIC HAND HELD RADIO FREQUENCY CONTROL SYSTEM

**Full Reset** - If a new handset is obtained the control system will need to learn the handset's unique code via a Full Reset.

Also, if the fire is not working and the Basic Reset (described on page 7) has not worked a Full Reset can be carried out:

- a. Open the Door and locate the electronic Receiver Box on the right side and slide it out for access.
- b. Locate the Reset Hole on the side of the Receiver and using a pen press and hold in the Reset button until you hear two beeps.
- c. The first beep is short and the second beep is long. After the second beep release the Reset Button.
- d. Now on the Handset, within the next 20 seconds press and hold the Small Flame Button until you hear two additional short beeps confirming the code is set in the Receiver.
- e. If you hear one long beep the Code as not been set so repeat the procedure.
- f. If the Handset still does not work check the wiring and or replace the Receiver and Handset. If not faults can be are found you should investigate returning the whole Burner Control System Assembly to Nu-Flame for Rectification as this could be the least cost option.

### 19.2 - NO SPARK IGNITION

- a. With the Remote Control Systems replace the batteries in the receiver and handset.
- b. Check there is no dust/debris shorting out the electrode or blocking gas from the pilot.
- c. Check the condition of the Ignition lead and ensure it is connected to both the ignition electrode and receiver. Check that the Ignition lead is not trapped and or shorting, replace if required. For the Manual System this will involve a new control, for the Thermatronic System a separate ignition lead is available.
- d. Check that gas is flowing from the pilot during the ignition sequence. Clean or Replace as required.
- e. For the Thermatronic Controls only, listen to the control to hear if the pilot gas solenoid is opening.  
Change the receiver, and the handset at the same time and/or gas control. Refer to Section 22 for Cable connections diagram.

### 19.3 - PILOT GOES OUT AFTER FIRST LIGHTING

- a. Check there is no debris blocking the flame to the thermocouple.
- b. Check the thermocouple is tightly connected to the control.
- c. Change the pilot assembly as a new thermocouple may be required.
- d. With the Manual System change the control.
- e. For the Thermatronic Systems only, listen to the control to hear if the pilot gas solenoid is opening. Also consider 19.2a.  
If not Change the receiver, and/or Handset, (which ever applies), also at the same time consider changing the gas control.  
Before ordering any replacement parts See Important Note at the Start of this Section  
Refer to Diagram for Cable connections in Section 22.
- f. Also see Section 19.4

### 19.4 - PILOT LIGHTS BUT MAIN BURNER DOES NOT LIGHT

- a. With All Control Systems listen to hear if gas is flowing into the main burner.
- b. Check there is no dust or debris blocking the flame from the pilot to the main burner.
- c. With the Thermatronic Systems check if the main control knob on the control is turning to the high setting and listen to hear if the valve is opening. If not change the Handset & Switch (which ever applies) and at the same time the gas control.  
Also check 'f' (below) before considering replacing any parts. You should also consider the **Important** note in 19.0.
- d. All Control Systems have a Pressure Test Point to allow the Burner Pressure to be checked to confirm if gas is flowing from the control.  
On the Manual Control it is visible at the front left of the control. On the Thermatronic it is at the front of the Control and is the left/rear Pressure Test Point.
- e. Check if the main injector is blocked. Clean or Replace.

### 19.5 - PILOT FLAME SHORTENS, OR GOES OUT WHEN MAIN BURNER IS SELECTED

- a. Monitor the supply pressure at the isolation elbow as the main burner lights. If pressure drops, check gas pipe sizing, quality of pipe bending. Check for debris in the gas supply and or gas filter if fitted.
- b. Check that another appliance is not affecting the gas supply pressure.
- c. Check the points raised in Sections 19.3 and 19.4.

### 19.6 - POOR FLAME PICTURE

- a. Check the supply pressure is correct at the isolation elbow. If the pressure is low, check gas pipe sizing, quality of pipe bending.  
Check for debris in the gas supply and or gas filter if fitted.
- b. The Control Systems have a pressure point to allow the Burner Pressure to be checked, it is present at the Front, the left pressure tapping on the Control. You may wish to check 'c' first.
- c. Check that another appliance is not affecting the gas supply pressure.
- d. Check there is not a flue/ventilation problem – carry out a spillage test.
- e. Check fuel bed layout as detailed in Section 15.

### **19.7 - FIRE OPERATES FOR A WHILE THEN GOES OUT**

- a. Check the supply pressure is correct at the isolation elbow with all other gas appliances working. If the pressure is low or fluctuating up and down check gas pipe sizing, quality of pipe bending. Check for debris in the gas supply, pilot pipe and or gas filter if fitted.
- b. Carry out a spillage test from cold. Look for signs of Discoloured Walls or Trims as this may be an indication of a Downdraught Problem.
- c. Establish how long the fire stays alight then repeat the Spillage Test around this time.
- d. For a Thermatronic System check that the Control is functioning correctly as detailed in 19.2 specifically the Thermocouple Electrical Connections and Pilot Flame size.  
**Downdraught problems can be related to the condition of the flue, chimney termination or geographical location and so if a Flue Problem is thought likely but no problem is found during the investigation isolate the fire and seek expert advice.**

### **19.8 - THERMATRONIC RADIO FREQUENCY CONTROL SYSTEM DOES NOT OPERATE**

- a. Check the radio frequency control is being correctly operated - see section 2.4
- b. Check for error messages and check batteries - see section 2.5
- c. Reset the Mertik Maxitrol Logic Circuits - see section 2.6

**Important :** In instances where it is indicating that the main control system needs changing, you should investigate returning the whole Burner Control Assembly to Nu-Flame for rectification as this could be the least cost option.


**ALWAYS CONDUCT A GAS SOUNDNESS AND SPILLAGE CHECK AFTER SERVICING.**

**ALWAYS RESEAL THE PRESSURE TEST POINT AND CHECK THAT IT IS GAS TIGHT.** (This accounts for a lot of recalls.)

**ALWAYS CHECK THAT THE GLASS IS CLEAN AND FREE FROM FINGERPRINTS. See Section 3**  
(This accounts for a lot of recalls).


**Note: Marks on the Glass Panel are Not Covered by the Manufactures Warranty.**

**FENTON CF (Conventional Flue - Natural Gas)**

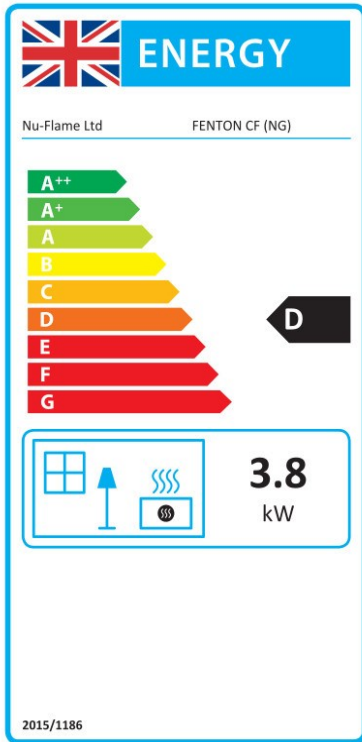


Supplier	Nu-Flame Limited
Model	Fenton CF (NG)
Energy Efficiency Class	D
Direct Heat Output	3.8
Energy Efficiency Index	73.9
Useful Energy Efficiency at Maximum	84.9%
Useful Energy Efficiency at Minimum	69.3%
<p>The fire must be Installed &amp; serviced by a properly qualified (in accordance with Local &amp; National Codes) Installation Engineer and in accordance with these Installation Instructions</p>	

**FENTON CF (Conventional Flue - Natural Gas) Thermostatic Remote Control**

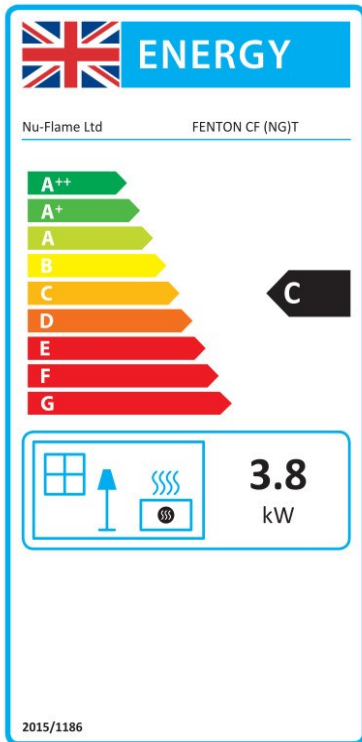


Supplier	Nu-Flame Limited
Model	Fenton CF (NG)T
Energy Efficiency Class	C
Direct Heat Output	3.8
Energy Efficiency Index	78.9
Useful Energy Efficiency at Maximum	84.9%
Useful Energy Efficiency at Minimum	69.3%
<p>The fire must be Installed &amp; serviced by a properly qualified (in accordance with Local &amp; National Codes) Installation Engineer and in accordance with these Installation Instructions</p>	

**FENTON CF (Conventional Flue - Propane)**

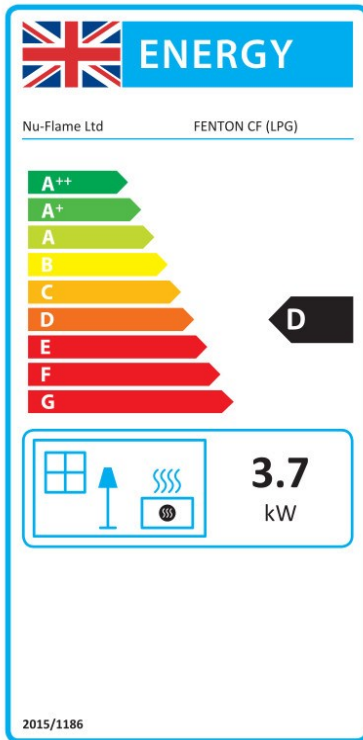


Supplier	Nu-Flame Limited
Model	Fenton CF (LPG)
Energy Efficiency Class	D
Direct Heat Output	3.7
Energy Efficiency Index	74.6
Useful Energy Efficiency at Maximum	85.6%
Useful Energy Efficiency at Minimum	70.0%
<p>The fire must be Installed &amp; serviced by a properly qualified (in accordance with Local &amp; National Codes) Installation Engineer and in accordance with these Installation Instructions</p>	

**FENTON CF (Conventional Flue - Propane) Thermostatic Remote Control**

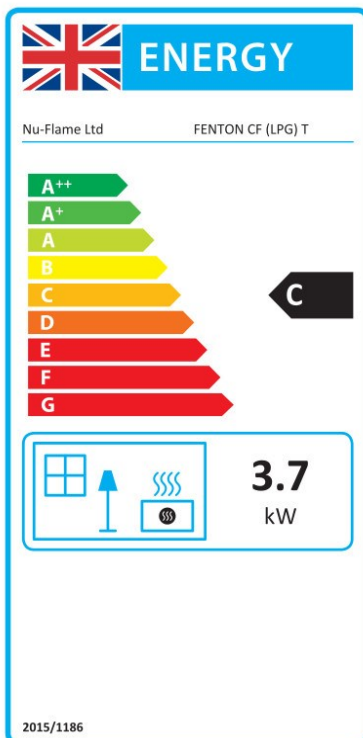


Supplier	Nu-Flame Limited
Model	Fenton CF (LPG)T
Energy Efficiency Class	C
Direct Heat Output	3.7
Energy Efficiency Index	79.6
Useful Energy Efficiency at Maximum	85.6%
Useful Energy Efficiency at Minimum	70.0%
<p>The fire must be Installed &amp; serviced by a properly qualified (in accordance with Local &amp; National Codes) Installation Engineer and in accordance with these Installation Instructions</p>	

**FENTON CF (Conventional Flue - Natural Gas)**

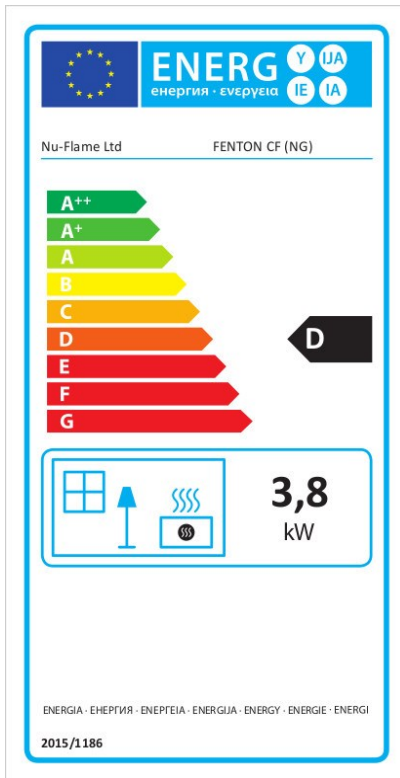

Supplier	Nu-Flame Limited
Model	Fenton CF (NG)
Energy Efficiency Class	D
Direct Heat Output	3.8
Energy Efficiency Index	73.9
Useful Energy Efficiency at Maximum	84.9%
Useful Energy Efficiency at Minimum	69.3%
<p>The fire must be Installed &amp; serviced by a properly qualified (in accordance with Local &amp; National Codes) Installation Engineer and in accordance with these Installation Instructions</p>	


**FENTON CF (Conventional Flue - Natural Gas) Thermostatic Remote Control**

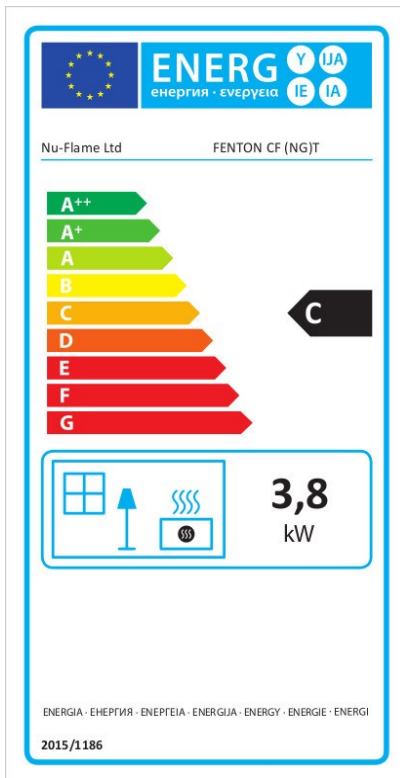

Supplier	Nu-Flame Limited
Model	Fenton CF (NG)T
Energy Efficiency Class	C
Direct Heat Output	3.8
Energy Efficiency Index	78.9
Useful Energy Efficiency at Maximum	84.9%
Useful Energy Efficiency at Minimum	69.3%
<p>The fire must be Installed &amp; serviced by a properly qualified (in accordance with Local &amp; National Codes) Installation Engineer and in accordance with these Installation Instructions</p>	




**FENTON CF (Conventional Flue - Propane)**

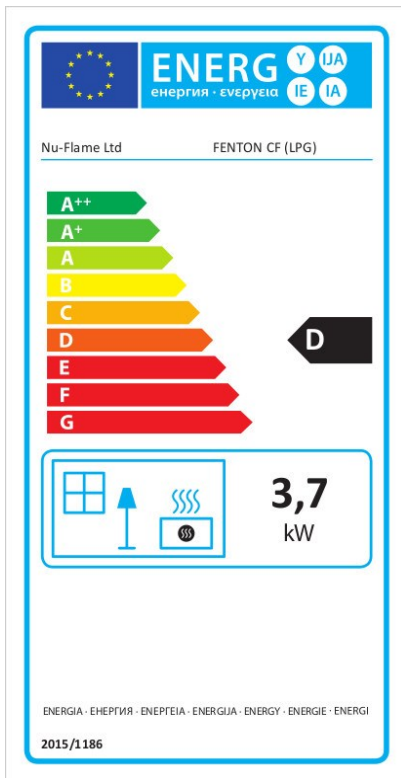

Supplier	Nu-Flame Limited
Model	Fenton CF (LPG)
Energy Efficiency Class	D
Direct Heat Output	3.7
Energy Efficiency Index	74.6
Useful Energy Efficiency at Maximum	85.6%
Useful Energy Efficiency at Minimum	70.0%
<p>The fire must be Installed &amp; serviced by a properly qualified (in accordance with Local &amp; National Codes) Installation Engineer and in accordance with these Installation Instructions</p>	

**FENTON CF (Conventional Flue - Propane) Thermostatic Remote Control**

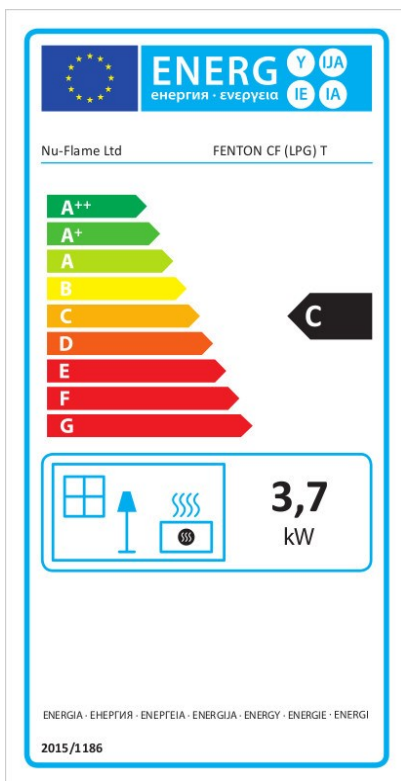

Supplier	Nu-Flame Limited
Model	Fenton CF (LPG)T
Energy Efficiency Class	C
Direct Heat Output	3.7
Energy Efficiency Index	79.6
Useful Energy Efficiency at Maximum	85.6%
Useful Energy Efficiency at Minimum	70.0%
<p>The fire must be Installed &amp; serviced by a properly qualified (in accordance with Local &amp; National Codes) Installation Engineer and in accordance with these Installation Instructions</p>	

## UK Declaration of Conformity

**Name of the Client** : Nu-Flame Ltd  
Address of the Client : Unit 4  
: Kimpton Trade & Business Centre  
: Minden Road  
: Sutton  
: Surrey  
: SM3 9PF

Telephone : 020 8641 9992

Manufacturing Location : As above

**This declaration of conformity is issued under the sole responsibility of the manufacturer above for:**

Product : Fenton CF

Certificate Number : UKCA 744503

**The object of the declaration described above is in conformity with relevant harmonized legislation**

Regulation 2016/426 on gas appliances as brought into UK law and amended.

The following harmonised standards and technical specification have been applied:

BS 7977-1: 2009 + A1: 2013 Specification for safety and rational use of energy of domestic gas appliances – Part 1: Radiant/convectors

**Where the Essential Requirements of the GAR have been met and approved by Notified Body:**

Responsible Test House : BSI Group  
Address : Holywell Park  
: Ashby Road  
: Loughborough  
: LE11 3AQ  
: United Kingdom

Authorized Signature of Manufacturer:



Date of Issue: 19th April 2021

## EU Declaration of Conformity

**Name of the Client** : Nu-Flame Ltd  
Address of the Client : Unit 4  
: Kimpton Trade & Business Centre  
: Minden Road  
: Sutton  
: Surrey  
: SM3 9PF

Telephone : 020 8641 9992

Manufacturing Location : As above

**This declaration of conformity is issued under the sole responsibility of the manufacturer above for:**

Product : Fenton CF

Certificate Number : CE688450

**The object of the declaration described above is in conformity with relevant harmonized legislation**

Gas Appliance Regulation (EU) 2016/426

The following harmonised standards and technical specification have been applied:

BS 7977-1: 2009 + A1: 2013 Specification for safety and rational use of energy of domestic gas appliances – Part 1: Radiant/convectors

**Where the Essential Requirements of the GAR have been met and approved by Notified Body:**

Responsible Test House : BSI Group  
Address : Holywell Park  
: Ashby Road  
: Loughborough  
: LE11 3AQ  
: United Kingdom


Authorized Signature of Manufacturer:



Date of Issue: 21<sup>st</sup> February 2020

## 22. - DIAGRAM OF RADIO FREQUENCY CONTROL SYSTEM

**MERTIK MAXITROL**

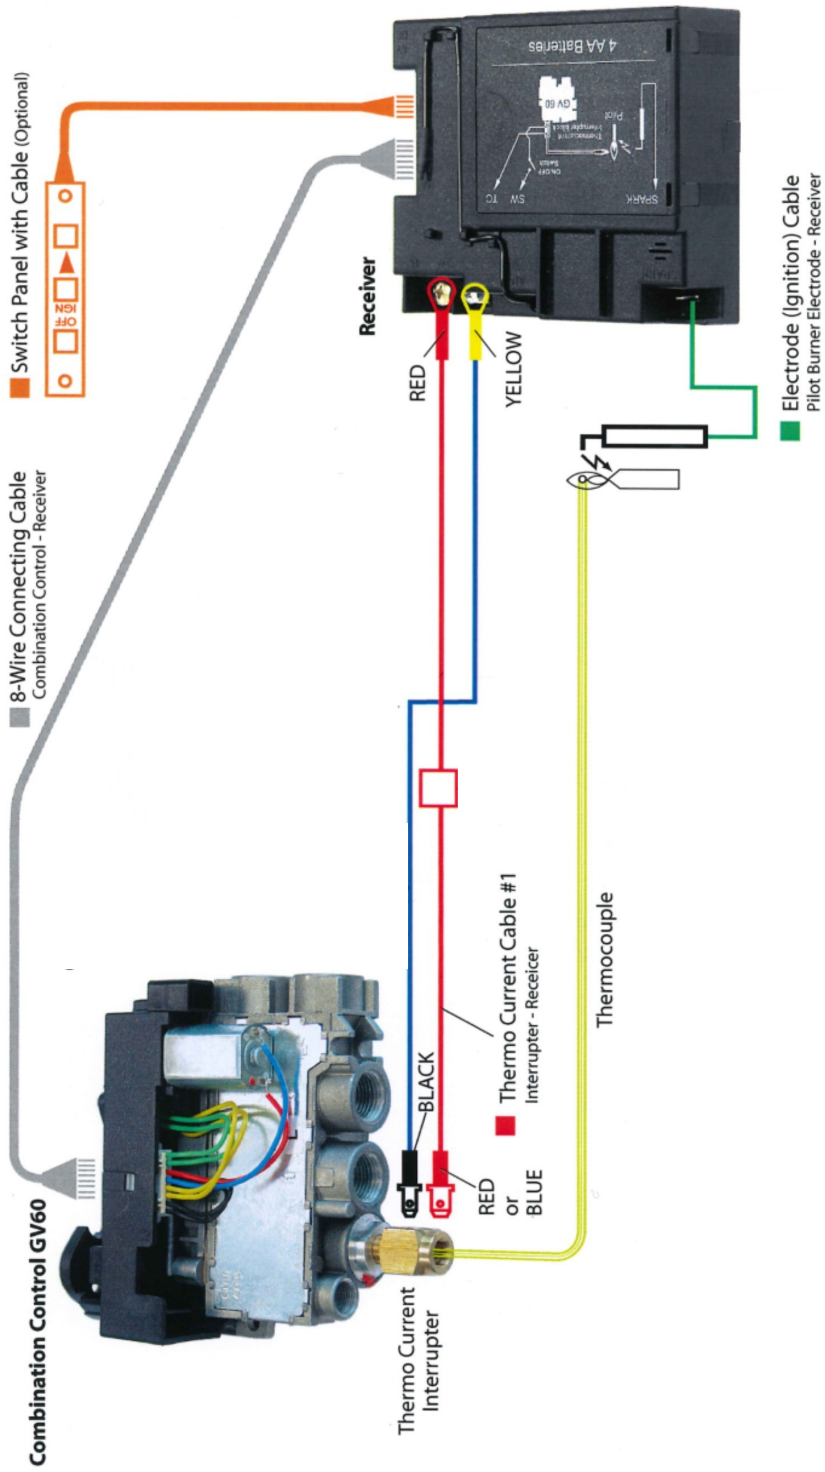



Telephone 020 8254 6802

#### **Nu-Flame Warranty and Repair Procedure for the Fenton CF.**

Nu-Flame fires are guaranteed for 1 year from the date of purchase. During that time our guarantee is to repair at our option, or replace at no charge a fire that proves to have faulty components or workmanship.

**Telephone Help Line.** In the event of a problem with a fire the first course of action should be to telephone our technical department on 020 8254 6802 during normal working hours 9 - 5.30 Monday - Friday (closed 1 - 1.30). If appropriate this should be done before the installer leaves site as we may well be able to resolve the problem over the phone and in any event it may well save the installer a return visit to site. If we are not able to resolve the problem over the phone we may ask you to return the fire, and will log your details and give you a return reference number.

**Returning the Fire and parts thereof.** After assessment we might consider it best to return part of the appliance, such as the burner only, for testing. In this example the burner can then be thoroughly inspected and any signs of installation faults can be reported back to you. After any repair work is carried out the flow rates can be checked and re-set if necessary in order to fully comply with CE Approval. **Note:** It is a condition of the warranty that you do not return any parts to us unless we request you to do so. For example if we request that the burner only is returned and you send the entire appliance the glass and the fuel bed and other items could be damaged during the return delivery to us. We will not be liable for any such breakages.

Under no circumstances should any attempt be made to repair the burner on site without our express knowledge and approval during the warranty period.

This guarantee is given subject to the following provisions:

1. That the installation is carried out by a CORGI registered installer (we may require their registration details).
2. That the appliance is installed and used in accordance with our Installation & User instructions.
3. That the gas supply pressure at the appliance is not more than 3mbar below the gas pressure stated on the data plate when the appliance is running on high flame, with any other major gas appliances also running.
4. That the fireplace and flue system conform to relevant local codes, building regulations and British Standards.
5. This Guarantee is not transferable and relates to the original installation only.
6. The appliance has not been subject to misuse or accident or been modified or repaired by any person other than the authorised employee or authorised representative of Nu-Flame Ltd.
7. The Record Data section on the front of the Installation & Servicing Instructions is to be completed on installation.
8. Nu-Flame Ltd accepts no liability for any consequential loss or damage arising from the use or failure of the product or any information provided, including, but not limited to, economic or financial loss, damage to peripheral equipment or products, loss of use, productivity or time.
9. That the serial no. data plate on the burner is intact.

This guarantee in no way reduces your statutory rights.

This guarantee supersedes any previously published guarantees.

#### **Chargeable Repairs During And After The Warranty Period**

If a repair is chargeable during the warranty period, due to installation faults we will inform you and where possible give you a quote, or if this is not possible, a price guide before starting work. We cannot always give a firm cost until we commence the repair as it is not always possible to tell which components have been damaged.